

NVMS

User Manual



Version 1.0.0

2012-11-28

Contents

1	Software Introduction	1
1.1	Summary	1
1.2	Operation Environment	1
1.3	Install and Uninstall	2
1.3.1	Install the Software	2
1.3.2	Uninstall the Software	5
2	Login Software	6
2.1	Login	6
2.2	Control Panel Instruction	7
3	Device Management	9
3.1	Add Device	9
3.2	View, Change or Delete Device	10
3.3	Area and Camera Management	13
3.3.1	Area Management	13
3.3.2	Camera Management	14
4	Group and Scheme Setting	18
4.1	Create, Change or Delete the Camera Group	18
4.2	Add or Remove the Camera Group	18
4.3	Create, change or delete group dwell scheme	19
4.3.1	Create Scheme	19
4.3.2	Change and delete group dwell scheme	19
5	Live Preview	21
5.1	Preview	22
5.1.1	Monitory Point Preview	22
5.1.2	Stop Preview	22
5.2	Dwell Preview	22
5.2.1	Group Dwell Preview	23
5.2.2	Scheme Dwell Preview	23
5.3	Preview Control	23
5.4	Snap	24
5.4.1	Snap	24
5.4.2	Snap Number	24
5.4.3	Record and Snap Path	25
5.5	Multi-screen to Preview	25
5.6	Talk and Broadcast	25
5.6.1	Talk	25
5.6.2	Broadcast	26
5.7	PTZ Control	26
5.7.1	Parameter Configuration of PTZ	26
5.7.2	PTZ control	26
6	Record Management	27
6.1	Manual Record	27
6.2	Schedule Record	27
6.3	Motion Detection Record	28
6.4	Sensor Alarm Record	28
6.5	Set Record Partition	29
7	Playback Management	30
7.1	playback	31
7.1.1	Playback by Setting Time	31
7.1.2	Playback by Searching Event	32
7.2	Snap When Playback	32
7.3	Clip and Backup Record	32
7.3.1	Clip and Backup Record	32
7.3.2	Backup Path Configuration	32
8	Alarm Management	33
8.1	Sensor Alarm	33
8.2	Motion Detection Alarm	34

8.3	Video Loss Alarm	35
8.4	Alarm Preview	35
8.4.1	Alarm Preview Configuration.....	35
8.4.2	Alarm Preview	36
9	E-Map	37
9.1	Create map.....	37
9.2	Modify or Delete Map, Hotspot and Hotzone	37
9.2.1	Change or Delete Map	38
9.2.2	Add, Change and Delete Hotzone.....	38
9.2.3	Add, Change and Delete Hotspot.....	39
9.3	E-map Monitoring Settings.....	39
9.4	E-map live preview	39
10	Local Log.....	42
10.1	Search log	42
10.2	Log Maintenance	42
10.3	Export	42
11	User Management.....	43
11.1	Create a Resource with the Default Permission.....	43
11.2	Create, change and delete users	43
11.3	Account Right Configuration.....	44
12	Basic	46
12.1	System Startup and Maintenance.....	46
12.2	Backup and Restore	46
12.2.1	Backup System Configuration data	47
12.2.2	Restore System Configuration Data.....	47
12.3	Manually Trigger the Alarm Output	47

1 Software Introduction

In this chapter, you will read a detailed introduction of the operation environment, install & uninstall of this software.

1.1 Summary

Network Video Monitoring System (hereinafter referred to as “NVMS”) is a monitoring client which is specially designed for network video surveillance. After the network video monitoring system is well built, the super administrator can control the video input signal devices, such as cameras, domes, etc., to achieve live monitor, video record and backup by configuring the video parameters and viewing the live in the control panel. Users can choose the menu to control video surveillance system in the control panel. The main functions of the control panel include live view, playback, E-map, device management, group and scheme settings, user account and permission, local log, basic configuration and alarm management.

1.2 Operation Environment

1) Operating System Requirement:

System	Recommendation
Windows XP	Windows XP professional version (32bit), direct 9.0c. Microsoft YaHei font need to be installed.
Windows 7	Windows 7 (32bit , support SP1) , Direct 11.0 or higher

2) Hardware Requirement :

Item	Recommendation
CPU	Intel Core Dou , 2.6GHz or higher
Memory	2GB or above
HDD	250GB or above
Graphics Card	Independent graphics card; 512M graphics memory or higher

3) When running NVMS-1000, you need to ensure that all the running antivirus software and firewall are closed, so that the program of the NVMS can be installed.

 
NVMS User Manual

1.3 Install and Uninstall


1.3.1 Install the Software

Double click “Setup.exe” to enter the Installation Wizard


Click **【Next】** to install.

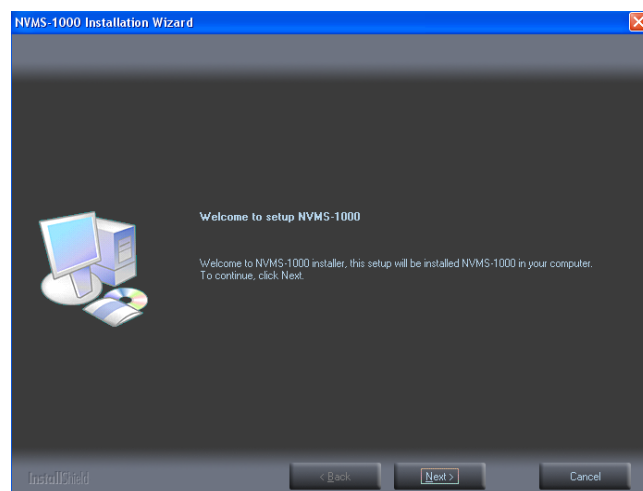

 Select “I accept the terms of license agreement” and click **【Next】** to continue.

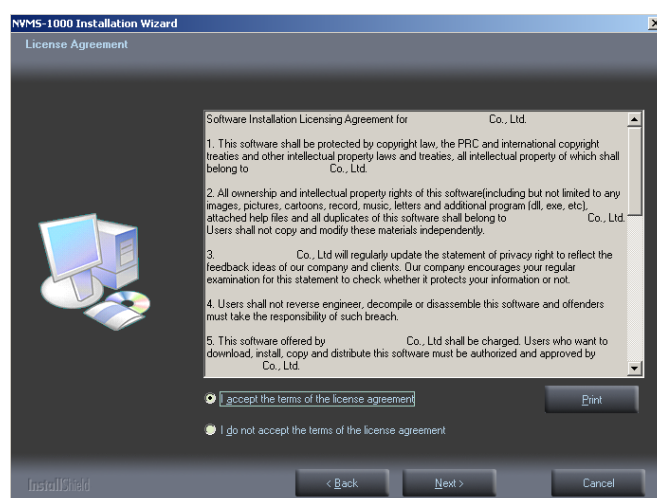


 Click **【Browse】** button to change the directory to save the program files. Click **【Next】** to continue.

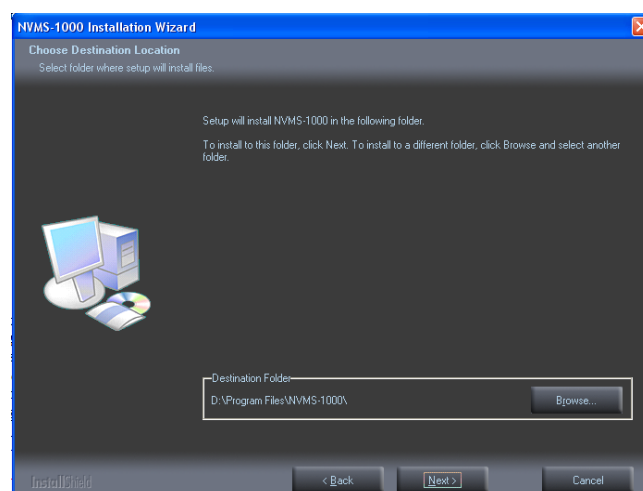


NVMS User Manual

 
Check “Vcredist_x86” and click **【Next】** to install this plug-in.

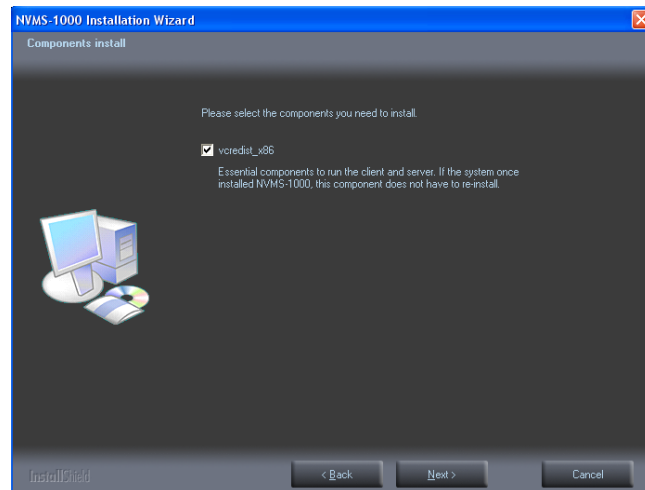

 
Click **【Next】** ; check “I have read and accept the license terms” and click **【Install】** to start installation of Vcredist_x86; then click **【Finish】** to complete installation. Please refer to the below three pictures.

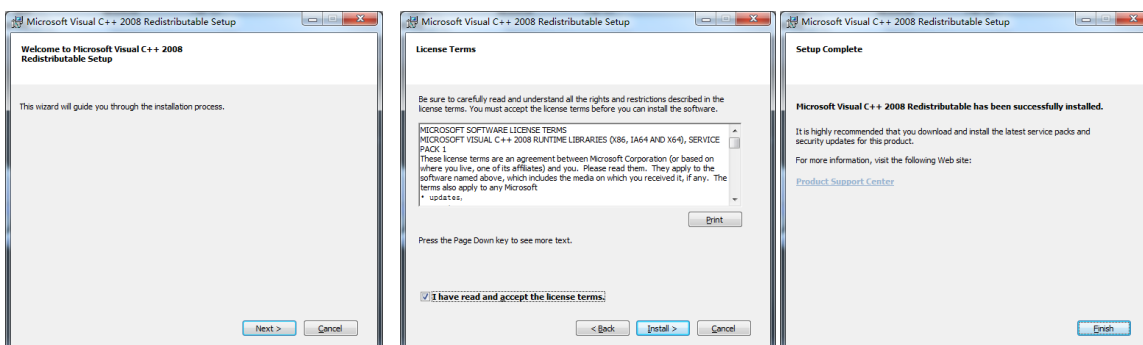

 Note: If the above plug-in has been installed, please click **【Repair】** and click **【Next】** to repair software. Click **【Finish】** button to finish repairing.

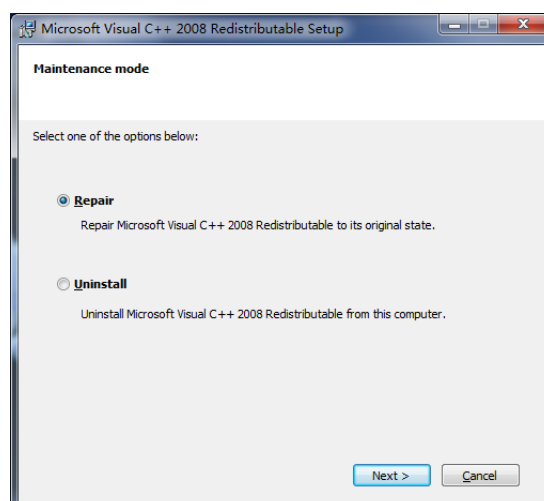


Click **【Next】** to continue.

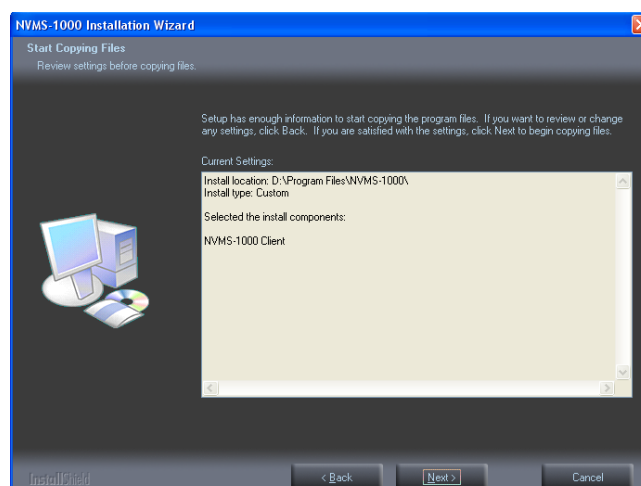 


If NVMS-1000 is firstly installed , the WinPcap will be opened automatically. Click **【Next】** to continue

 
Note : If NVMS-1000 is not firstly installed or WinPcap4.0.2 (or higher) has been installed already, NVMS-1000 will be installed automatically.

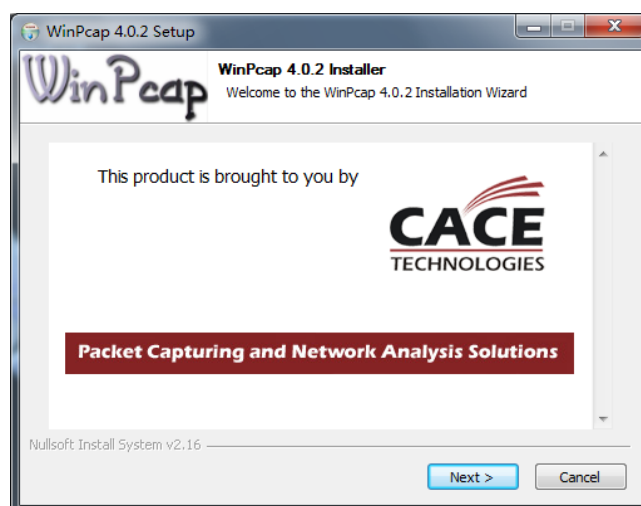

 Click **【Next】** to enter the interface of License Agreement

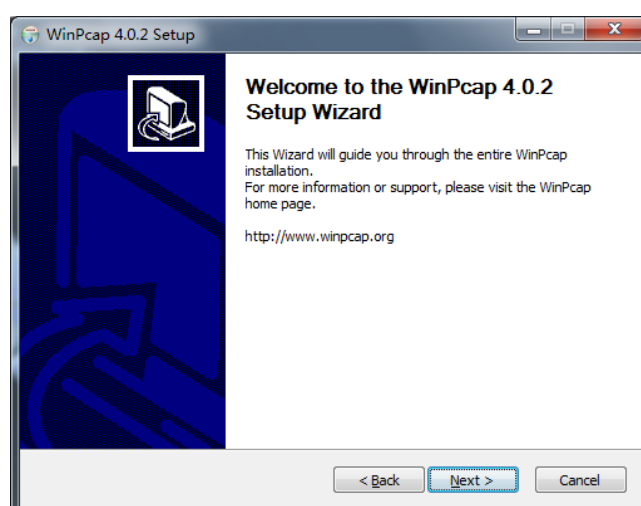


Click **【I Agree】** to install WinPcap

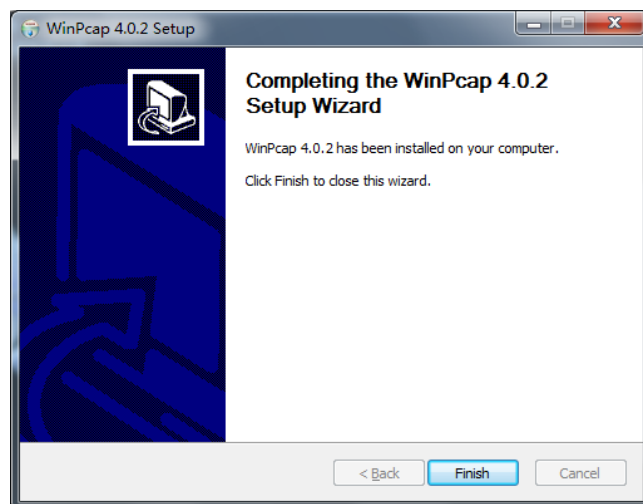 


After finishing installing WinPcap, click **【Finish】** to return to the installation interface of NVMS-1000. The NVMS-1000 will be installed automatically.

 At last, check “Create desktop shortcuts”, and then click **【Finish】** button to complete installation.

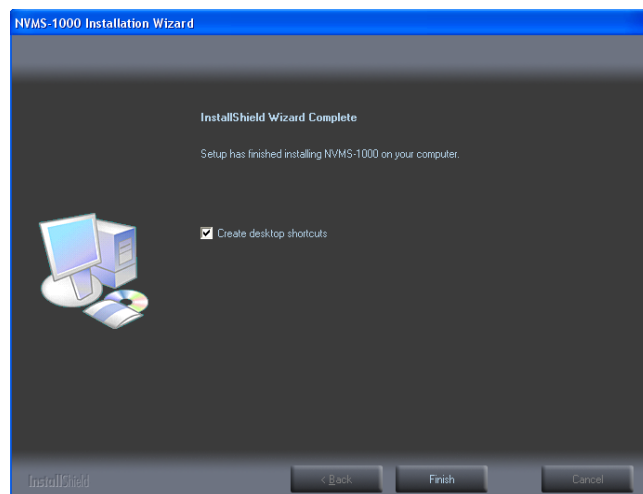


1.3.2 Uninstall the Software

 Click “Start” at the bottom of the desktop to find the shortcut of NVMS-1000 ; then click “Uninstall” to pop up a dialog window; click **【Yes】** to uninstall the software.

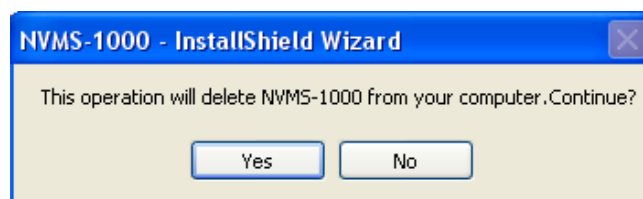

 At last, click **【Finish】** button to finish uninstall .

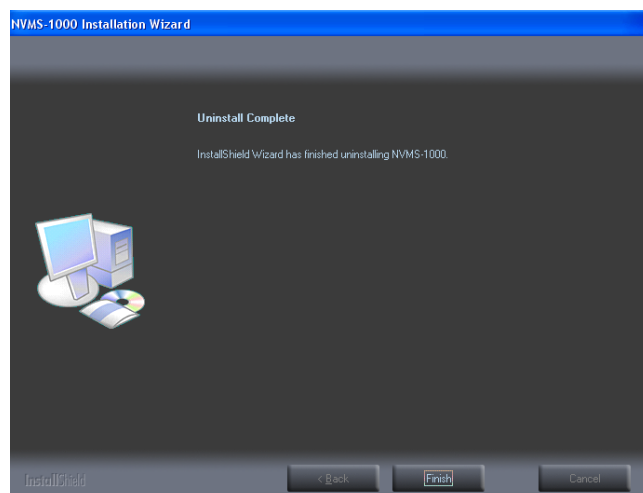


2 Login Software

2.1 Login

First time to login:

- ① For the first time to run the NVMS-1000, you need to register a super administrator. You shall self-define the username and password.
- ② To avoid forgetting the password, you can set some questions to help you find the password quickly.
- ③ After you input your user name, password and set the questions and answers, click **【Register】** to enter into the software.

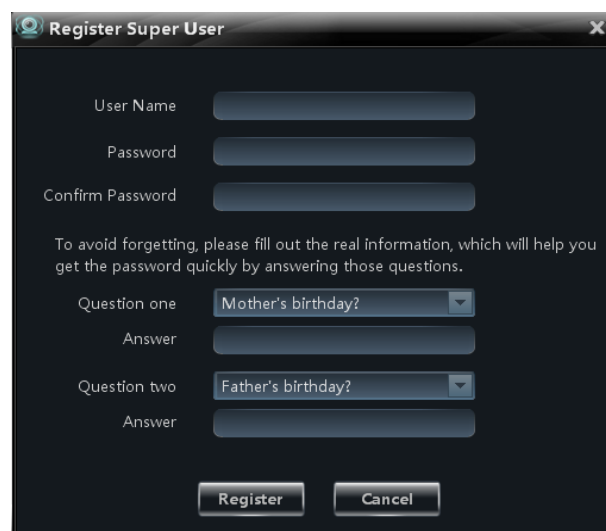

Register Super User

User Name

Password

Confirm Password

To avoid forgetting, please fill out the real information, which will help you get the password quickly by answering those questions.

Question one

Answer

Question two


Answer

Register **Cancel**

Input the username and password created by you.

If checking “Remember Password”, there will be no need to input password when you log in next time.

If checking “Auto Login”, it will automatically log in as current user next time.

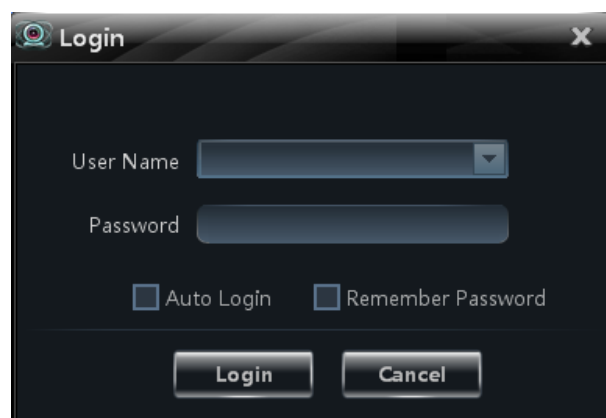

Login

User Name


Password

☐ Auto Login ☐ Remember Password

Login **Cancel**

Successful login for first time:

After successful login, a window will pop up. Check the partition for storing record files and click **【OK】** to save the settings.

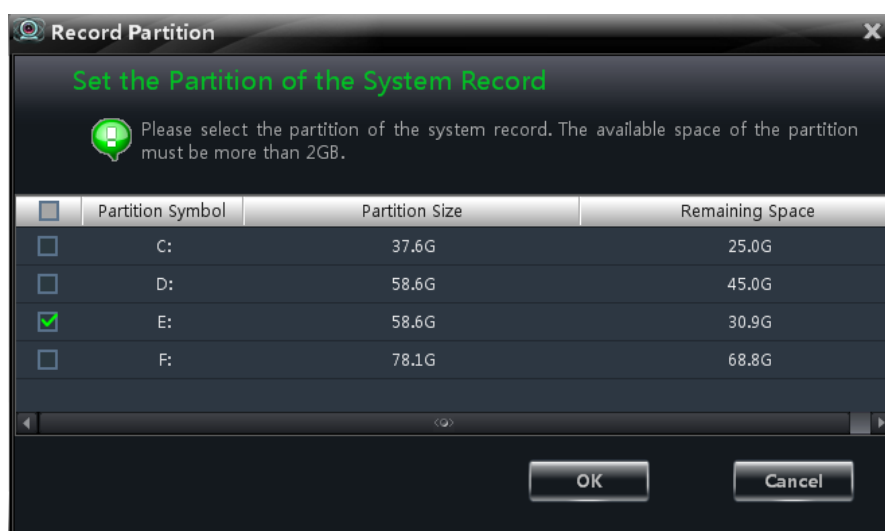

Record Partition

Set the Partition of the System Record

Please select the partition of the system record. The available space of the partition must be more than 2GB.


<input type="checkbox"/>	Partition Symbol	Partition Size	Remaining Space
<input type="checkbox"/>	C:	37.6G	25.0G
<input type="checkbox"/>	D:	58.6G	45.0G
<input checked="" type="checkbox"/>	E:	58.6G	30.9G
<input type="checkbox"/>	F:	78.1G	68.8G

OK **Cancel**

NVMS User Manual

2.2 Control Panel Instruction

 The control panel of NVMS-1000 is shown below

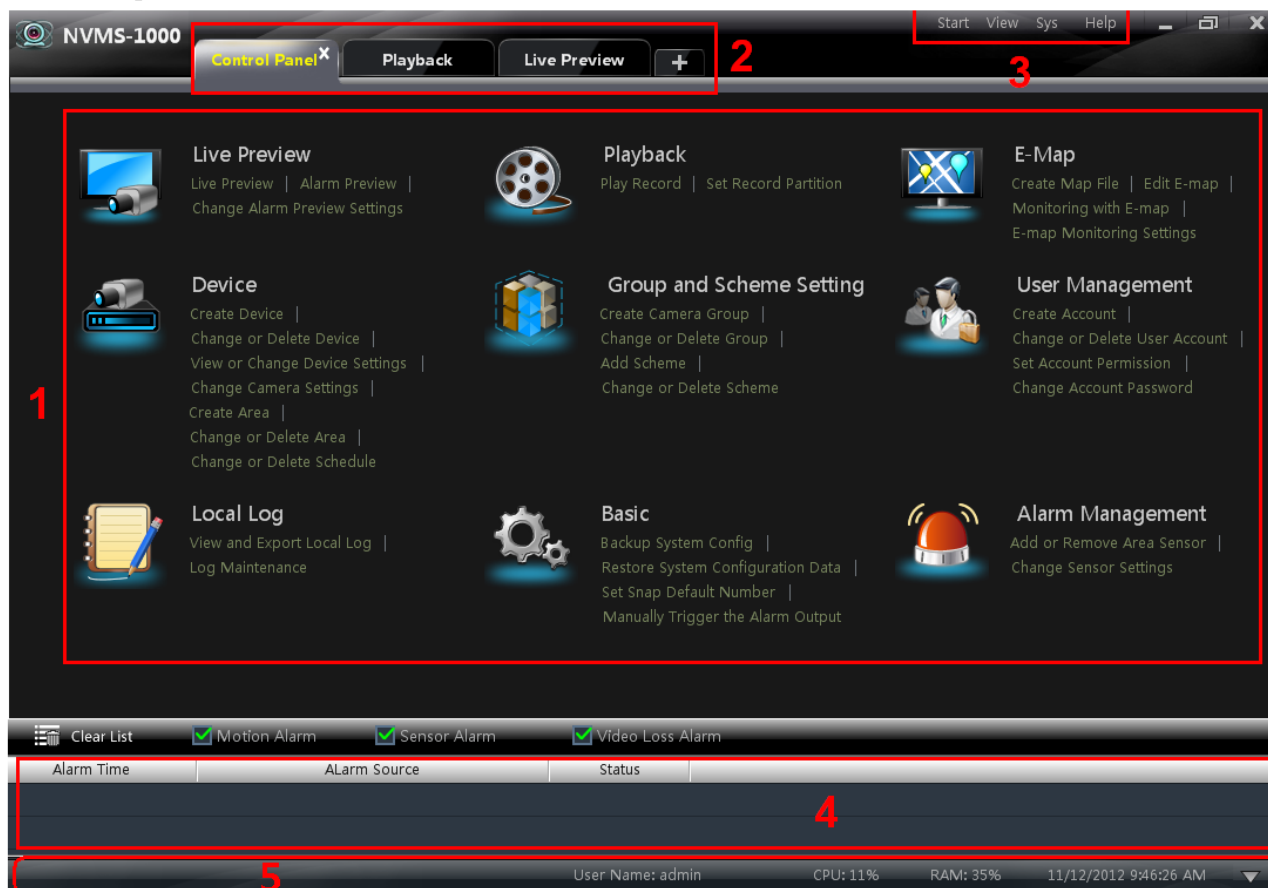



There are five areas in the main interface of this software. The descriptions of each area are as follows :

Area	Description	Area	Description
1	Function Area	2	Tab Bar—to display the operated functions
3	Menu Bar	4	Alarm Information List.
5	Status information list		








Description of Menu Bar

Menu	Description
Start	Export the control panel, live preview, playback tab and lock or exit the client.
View	Export the live preview, control panel, local log, E-map, alarm preview, playback, user account and permission, basic configuration and device management and organize the live view
System	Including lock client , broadcast to device, switch user, import or export configuration, etc.
Help	View user manual and software version


 


Descriptions of Function Module

Menu	Description
	Live Preview: To view live images and record, snap, control PTZ, etc.
	Playback: To remotely play the local record.


NVMS User Manual


	E-map: To manage and display maps, hot zones and hotspots. To operate E-maps – zoom in/out e-maps, view hot zones and hotspots, display alarm information on the map.
	Device Management: To create, modify or delete areas, devices and cameras.
	Group and Scheme Settings: To create, modify or delete camera groups and schemes.
	User Account and Permission: To add, modify, delete user and user permission.
	Local Log: To search, view and backup local log.
	Basic Configuration: To setup record partition and path, system startup and maintenance & backup and restoration.
	Alarm Management: To add or remove the sensor of the area; To setup alarm trigger and modify the area of the sensor.

Descriptions of Other Buttons

Button	Description
	Click to hide the window
	Click to zoom in/out the window
	Click to exit the window
	Click to extend or shrink the window (eg. Extend or shrink the list of alarm information list)

3 Device Management

 In the control panel, click  icon to enter the device management interface.

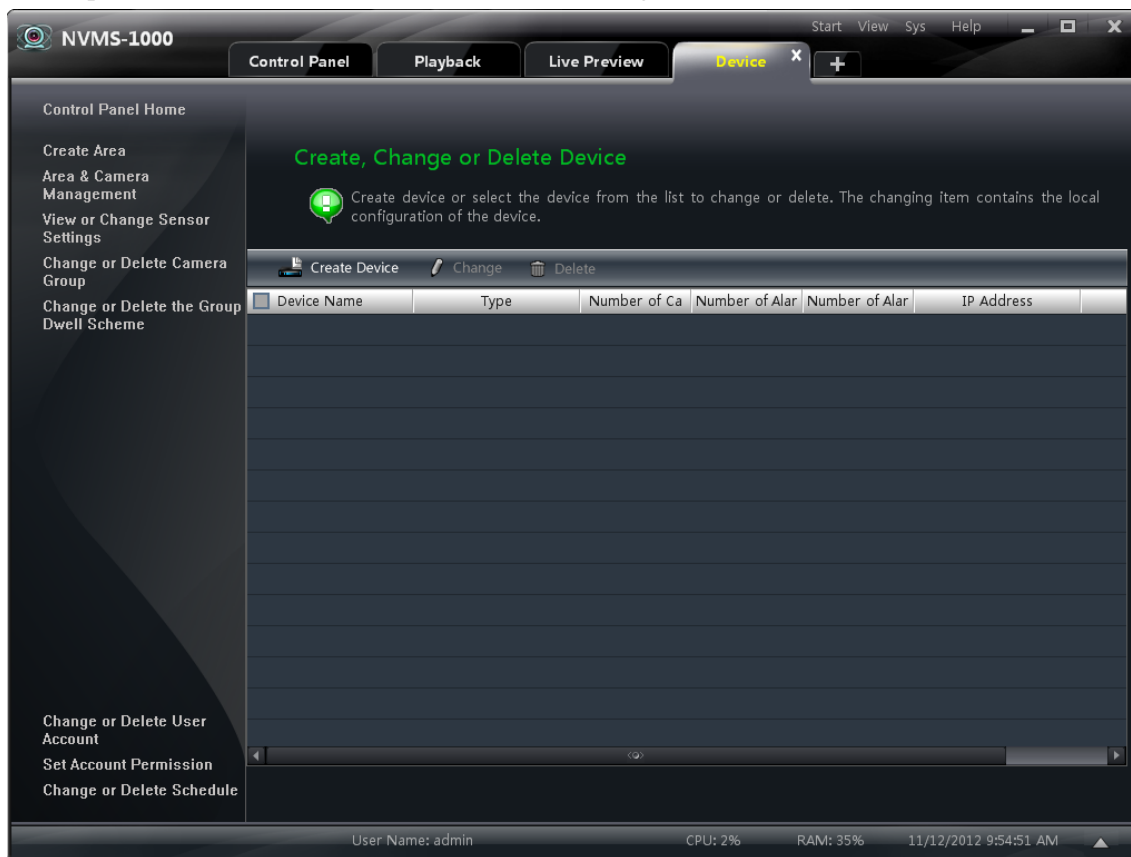

3.1 Add Device


Click  button to enter the interface.

- ① Select device type and input device name;
- ② Input IP address or domain, port of the device, then input its user name and password.
- ③ Create an area. If you haven't created area, you can click "Create a New Area" to create.
- ④ Check "Upload bandwidth more than 2M" according to the actual network situation. Checking or not checking it will affect the stream choice of live preview.

Note: You can click "Create an Area" shortcut menu under Device to create an area in the control panel.

NVMS User Manual


➤ Add Online Devices


Click  button to automatically search online devices in the local network. Click a device to display its basic information. Double click it to add it.



3.2 View, Change or Delete Device

Select the added device and click  button to delete the device from the list.

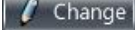 Select the added device and click  to pop up a window. In this interface, you can change the device name, address, port, etc. or change basic configuration, time configuration, etc.

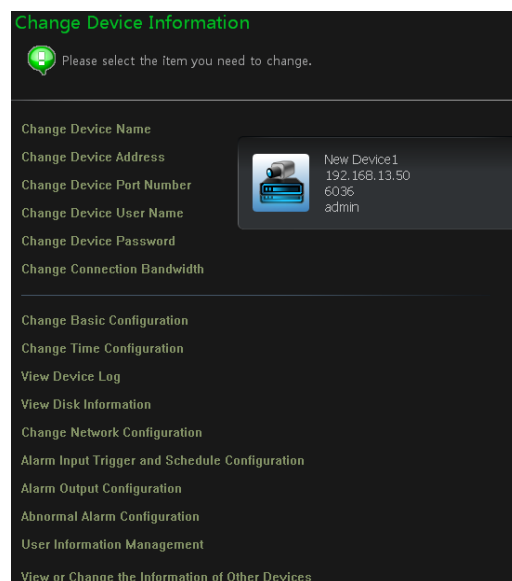

➤ Change the Device Name

Click **“Change Device Name”** to change the name of selected device.



 
➤ Change Device Address

Click **“Change Device Address”** to change the IP address of selected device.




➤ Change Device Port Number

Click **“Change the Port Number of Device”** to change the port of selected device.

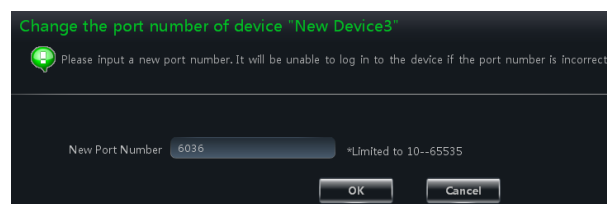

➤ Change Device User Name

 Click **“Change Device User Name”** to change the device account name.

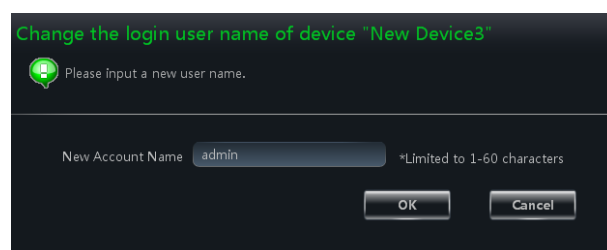


➤ **Change Device Password**




Check “*Upload bandwidth more than 2M*” according to the actual situation.

 Click “**Change Basic Configuration**” to pop up a dialog box. You can change the basic configuration of device and check “Permission Check” or “Record Coverage” according to the actual situation.

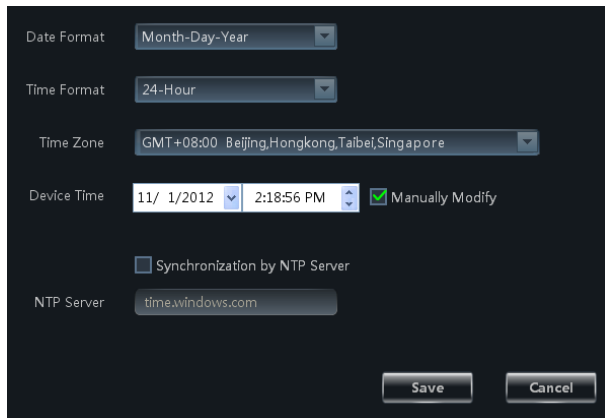

Click “**Change Time Configuration**” to enter the interface.
Change the time and date if you need.

 Click “*View Device Log*” to enter the interface.

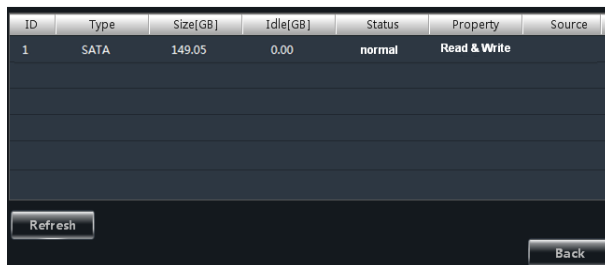

Click “**View Disk Information**” to check the detail information of disk from the list.

NVMS User Manual

➤ Change Network Configuration

Click “*Change Network Configuration*” to enter the interface. You can change HTTP port, Server port; network address, etc.

Note: If changing the port and IP address there, the network will disconnect. Then you need to accordingly change the port and IP address of the device connecting the NVMS-1000.

➤ Alarm Input Trigger and Schedule Configuration

Click “*Alarm Input Trigger and Schedule Configuration*” to enter the interface. Select a sensor corresponding to the alarm input; choose a type and holding time for it. You also can set trigger alarm or other configurations.

➤ Device Alarm Output Configuration

Click “*Alarm Output Configuration*” to enter the interface. Select an alarm output and holding time; then edit a name for it. You can enable buzzer alarm and set a time for it.

➤ Abnormal Alarm Configuration

Click “*Abnormal Alarm Configuration*” in to enter the interface. Choose the alarm type according to your need. Enable “Buzzer Alarm” and select alarm out.

NVMS User Manual


➤ User Information Management

Click “**User Information Management**” shortcut to enter the interface. You can check the information of user who is logging in the device.

User Name	User Type	Binding MAC Address
admin	Administrator	00:00:00:00:00:00
<div> Add Delete Change Password </div>		
<div> Save Cancel </div>		

3.3 Area and Camera Management

 In the control panel, click “**Change Camera Settings**” under Device to enter the interface. You can modify or delete the area and manage the cameras. Select a camera you want to setup as shown on the below figure.

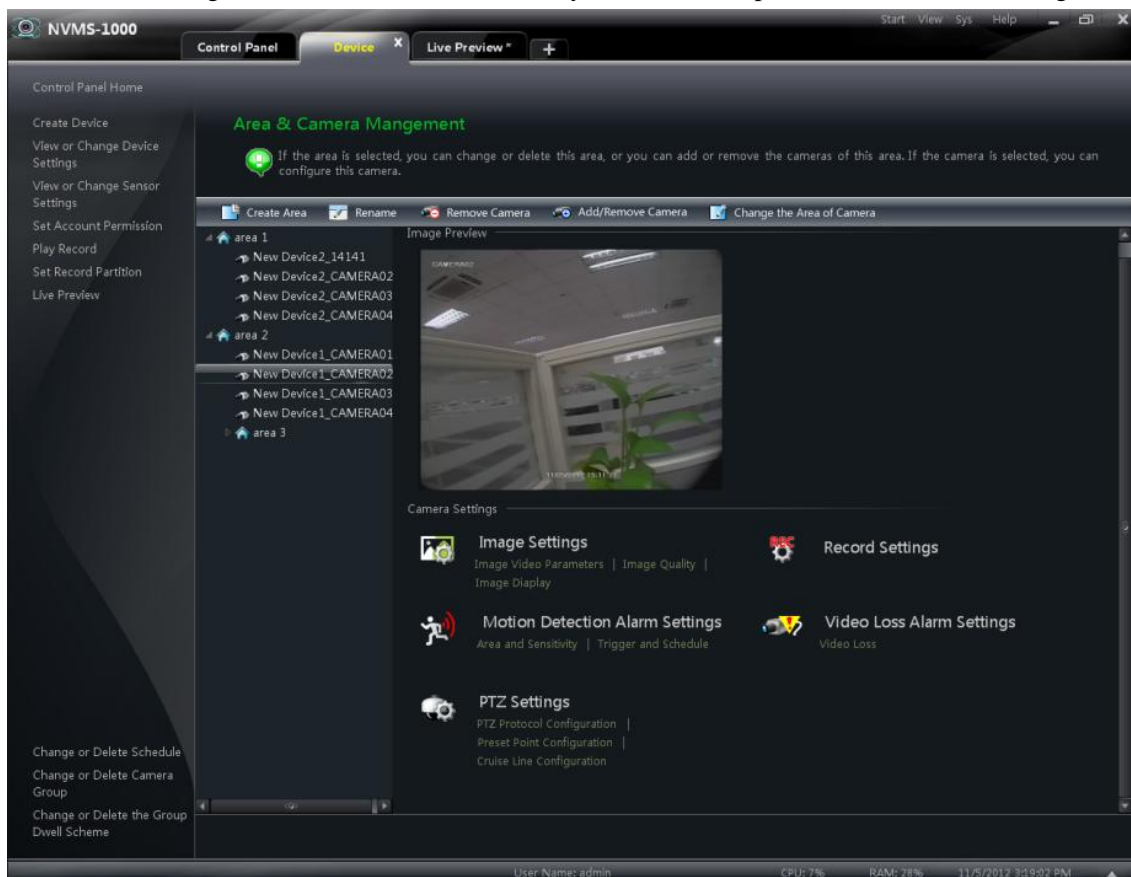

3.3.1 Area Management

Click  button to create area.

Select an area and click  button to change its name.

Select an area and click  button to delete it.

Create Area

Please input the area name.



Parent Area

Area Name
*Limited to 1-60 characters

 
OK
Cancel

NVMS User Manual

Select an area and click  to pop up a window.

- ① Check the camera on the left column and click  button to add the camera to the area.
- ② Check the camera on the right column and click  button to remove the camera from the area.

Select a camera and click  button to modify the area of this camera.

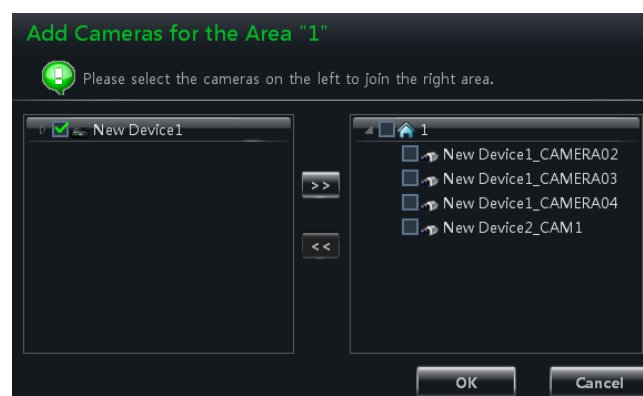

3.3.2 Camera Management

The real-time image will be displayed after selecting a camera. You can setup the parameters of this camera.

➤ Image Settings

Image settings include image video parameter, image quality and image display.

Click ***“Image video parameters”*** to enter the interface .

- ① Adjust the brightness, contrast, saturation and chroma of the image.
- ② Clicking **【Restore Default】** button will restore the above parameters to factory default settings.



Click ***“Image Quality”*** under Image Settings to enter the interface.

- ① Choose the device stream, resolution, quality, etc. according to practical situation.
- ② Click **【Copy to】** button to apply the setting to the selected channel.



Click ***“Image Display”*** to enter the interface.

- ① Create the camera's name and set up its display position on the OSD including the time stamp.
- ② Click **【Copy to】** button to apply the settings to the selected channel.



NVMS User Manual

➤ Record Settings

 
Click **“Record Settings”** to enter the interface as shown on the right.

Under the record of device

- ① Enable schedule or record audio
- ② Choose pre-recording time, duration and record save time.
- ③ Click **【Copy to】** button to save the settings to the selected channel.

Under the record of system


You can set schedule and record stream.

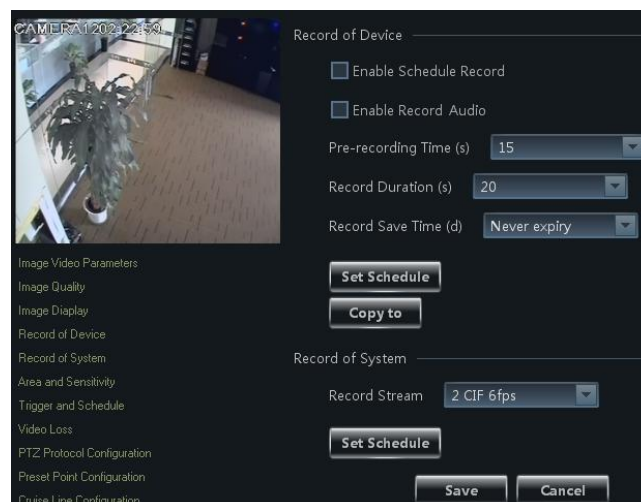



How to set schedule?

 The steps of setting schedule between record of device and record of system are same.

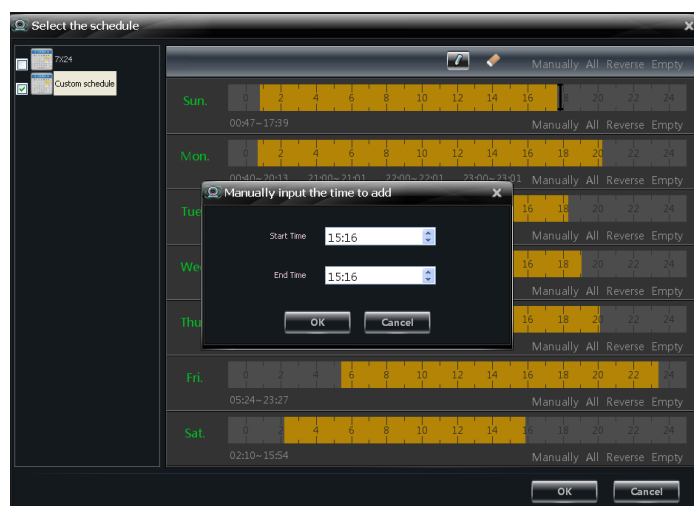Click **【Set Schedule】** button to pop up the follow figure.

 


- Check “7x24” or “Custom Schedule” to set schedule.
- Click  icon and move the cursor to select the time.
- Click  icon to delete the selected time.
- Clicking “Manually” to manually input time
- Click “All” / “reverse” to quickly select the time.
- Click “Empty” to clear all the time.

➤ Motion Detection Alarm Settings

Click **“Area and Sensitivity”** under Motion Detection Alarm Setting to enter the interface.

- ① Drag slide bar to set the sensitivity value. The higher the value is, the more sensitive it is.
- ② Click “Erase”/ “Add”, then hold press “Ctrl” and left click mouse to delete /add the area you want.
- ③ Click **【All】/【Reverse】/【Clear All】** button to select area or clear all the area quickly.

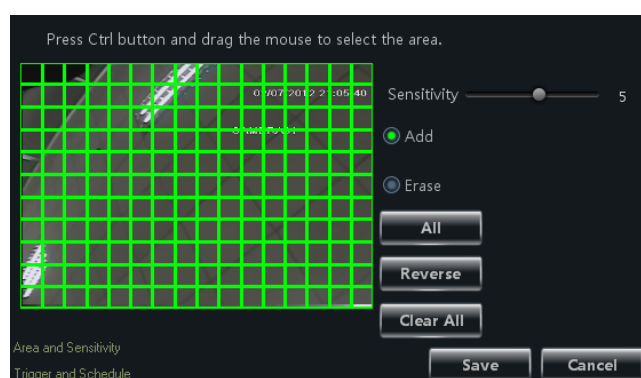


NVMS User Manual

Click **“Trigger and Schedule”** under Motion Detection Alarm Setting to enter the interface which includes device linkage and system linkage.


Note: Please refer to the user manual of the device for device linkage configuration.

 - ① Under the system linkage, check “Trigger to Play Audio File”. If the motion alarm of a certain channel is triggered, there will be given out a sound like “beep”.
- ② Click **【Trigger the Big Screen】** button to select channel. If the motion alarm of the selected channel is triggered, a big picture will pop up on the screen.
- ③ Click **【Trigger the Record Channel】** button to select channel. If the motion alarm of the selected channel is triggered, the channel’s record will be opened automatically.

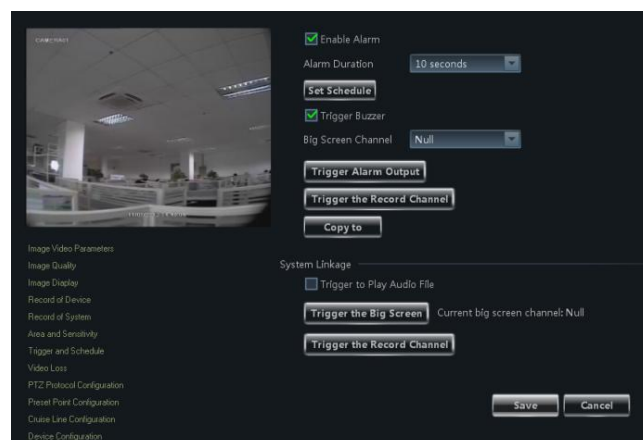


➤ Video Loss Alarm Settings

 Click **“Video Loss”** to enter the interface. The steps of configuring video loss are same with “Trigger and Schedule”, please refer to the relevant chapter.

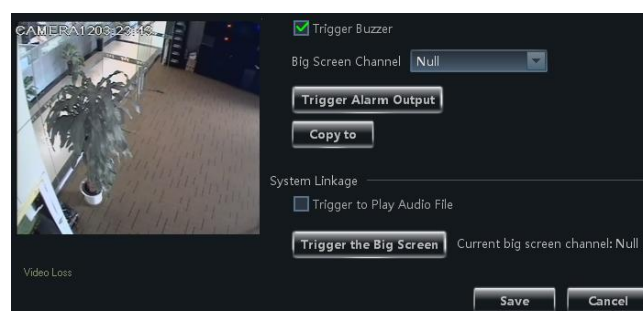

➤ PTZ Settings

 Click **“PTZ Protocol Configuration”** under PTZ Settings to enter the interface. You can enable or disable PTZ. From the Protocol and Baud Rate drop-down menu, choose a protocol and a baud rate to associate with the PTZ, and then input the address of the PTZ connecting the software.

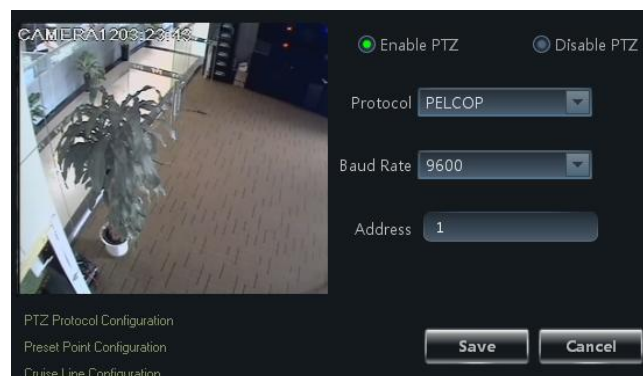





 
 
 












Click **“Preset Point Configuration”** under PTZ Settings to enter the interface. Enable corresponding preset points and create a new name in the “New Name” field by selecting the preset point. Adjust the dome direction, speed, etc by clicking the buttons. Click **【Save Position】** to save the current position of the dome.

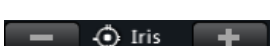

NVMS User Manual

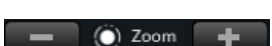
The definitions of the buttons are below:

Buttons	Description
	means the dome rotate up;  means the dome rotate up left;  means the dome rotate up right;  means the dome rotate down.  means the dome rotate left down;  means the dome rotate right down;  means the dome rotate left;  means the dome rotate right;  means the dome stop rotating
	Drag the slider bar to adjust rotation speed of the dome
	Focus button. Click  button to obtain long focus. Click  button to obtain short focus
	Iris button. Click  button to increase light of the dome. Click  button to decrease light of the dome
	Zoom button. Click  button to zoom in the picture of this camera. click  button to zoom out the picture of this camera

Return to Area and Camera Management interface, and then click **“Cruise Line Configuration”** PTZ Settings. You can add/change/preview/delete curies.

 


➤ Remove camera

In the Area and Camera Management interface, select a camera, click  button to pop up a dialog window, click **【OK】** button to remove the camera.


4 Group and Scheme Setting


In the interface of control panel, click “Group and Scheme Setting” to enter the interface. Please refer to the below picture:

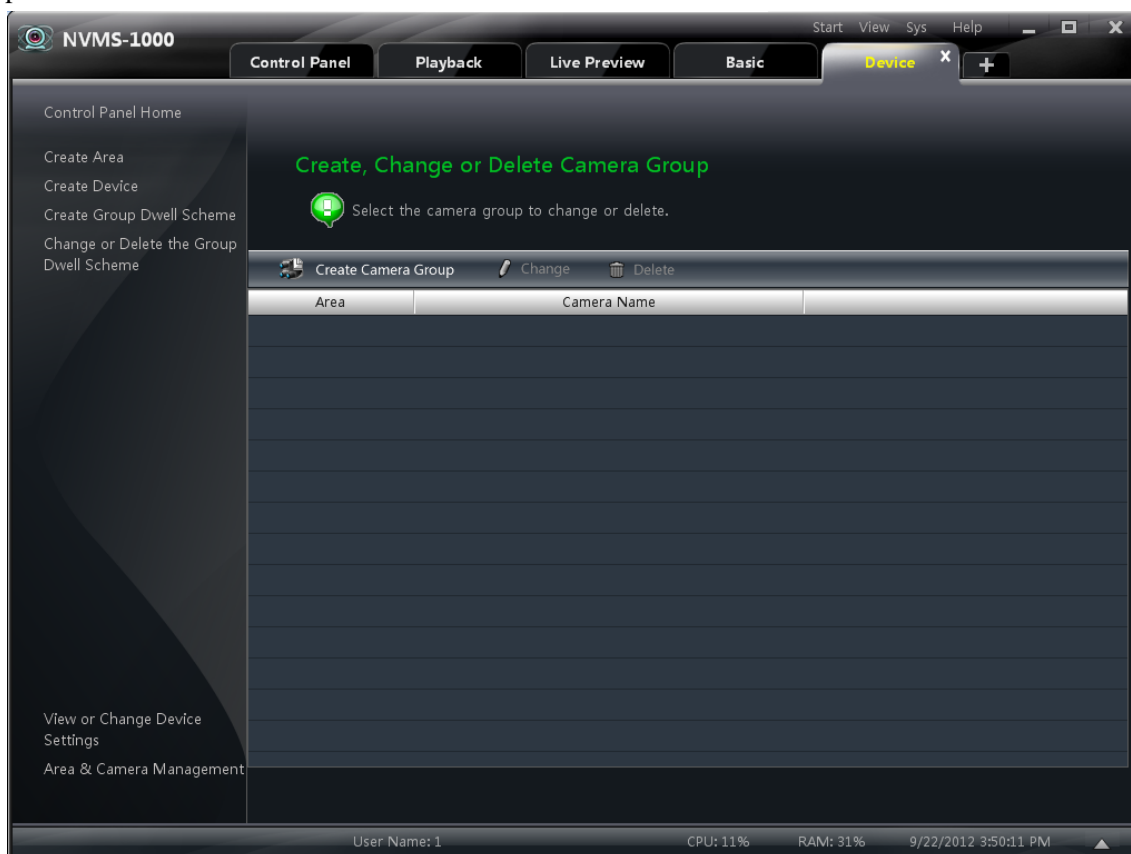


4.1 Create, Change or Delete the Camera Group



In the above interface, click  button to create a group.

 
Select a group in the group list, click  button to delete it.

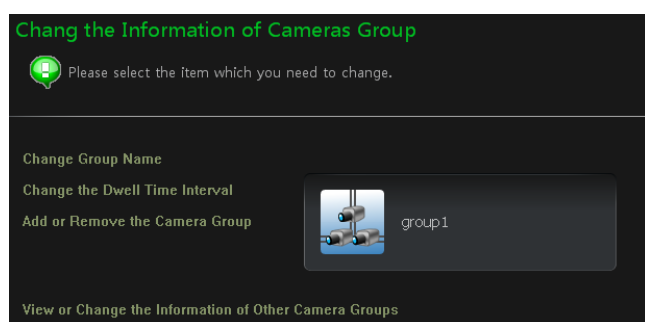Select a group and click  button to enter the interface as shown on the right. You can change the group name and dwell time interval in this interface.



4.2 Add or Remove the Camera Group

 
- ① Select a group and click  button to enter the interface. Then click “Add or Remove the Camera Group” to pop up the window as shown on the right.
- ② Check cameras on the left and click  button to add the selected cameras to the group on the right.

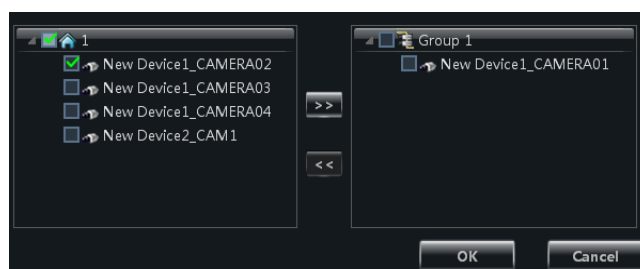

- ③ Check cameras on the right, then click  button to remove them from the group.


4.3 Create, change or delete group dwell scheme

 Scheme is used for dwelling group by group. Therefore, at least one group should be created. Click “**Change or Delete the Group Dwell Scheme**” on the left side of the menu to enter the interface as below.

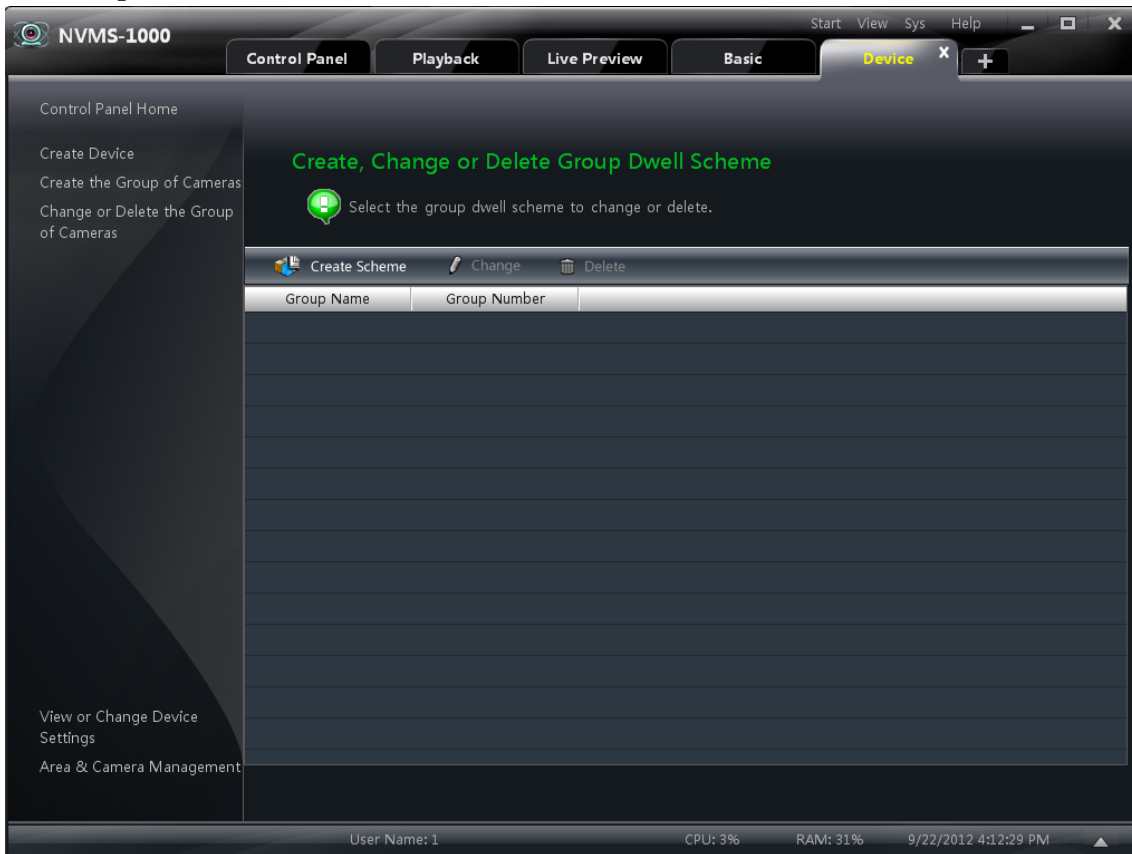



 4.3.1 Create Scheme

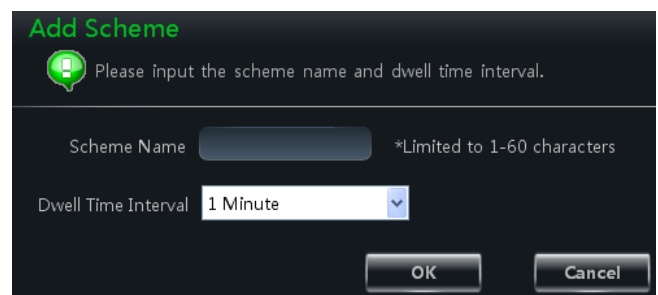
Click  button to create a scheme. The added scheme will be displayed in the scheme list.



4.3.2 Change and delete group dwell scheme



 Select a scheme in the scheme list, click  button to delete it.

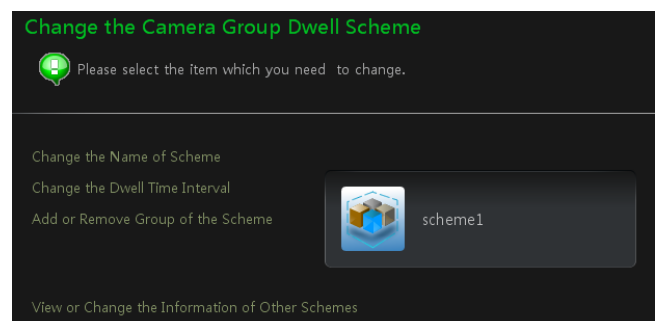
Select a scheme and click  button to enter the interface. You can change the name of scheme and the dwell time interval.



NVMS User Manual


Select a scheme and click  button. Then click ***“Add or Remove Group of the Scheme”*** to enter the interface.

 - Check group on the left and click  button to add the selected group to the scheme on the right.
- Check group under scheme on the right and click  button to remove the group.

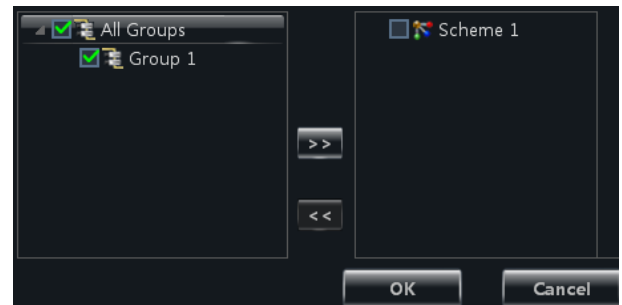


5 Live Preview

 In the interface of control panel, click “Live Preview” to enter the interface:

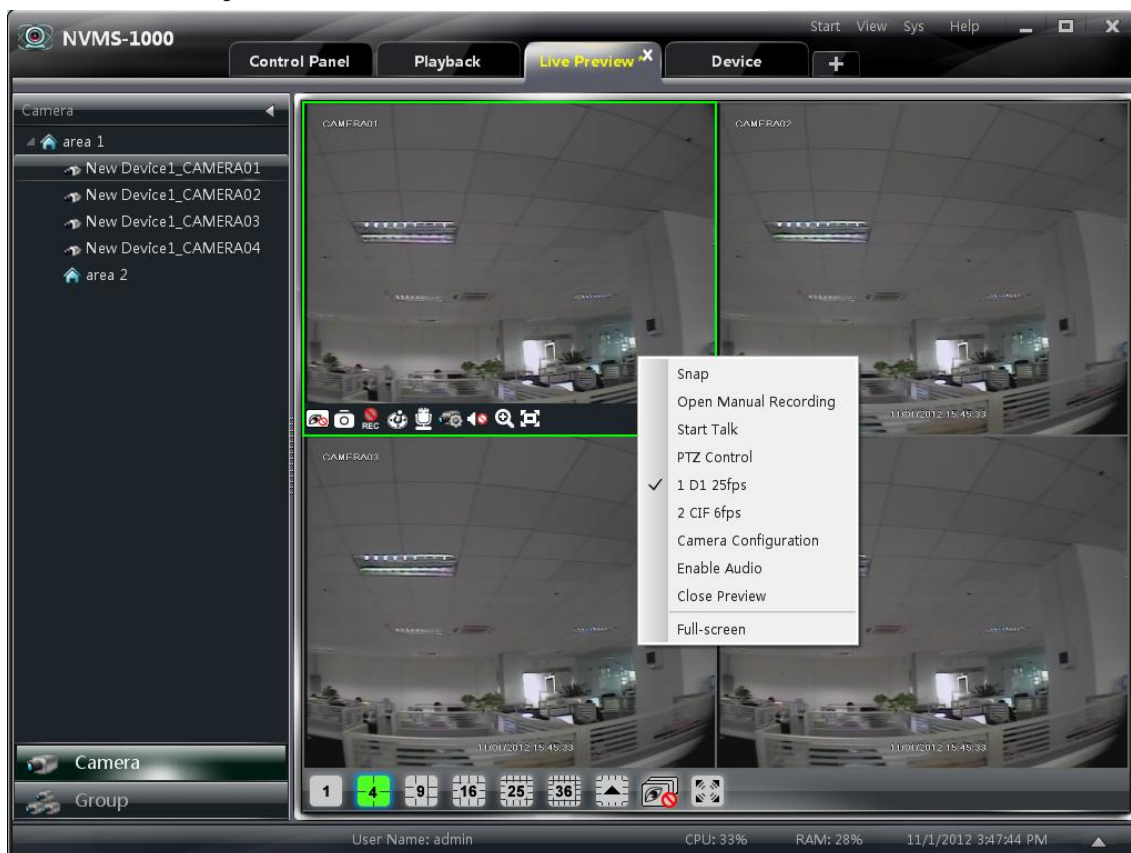

Buttons description of live preview:

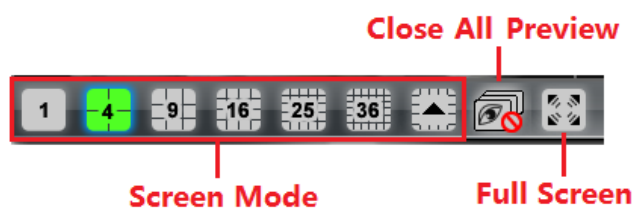 

Toolbar on the display window:

Icon	Description	Icon	Description
	Close image		Snap
	Start/stop manual record		PTZ control. Clicking the icon will display the control panel of PTZ.
	Start/stop talk		Camera configuration
	Open/close audio		Zoom in
	Fit to window		

NVMS User Manual


Right button funtions:

Menu	Description	Menu	Description
Snap	Snap picture	Open Manual Recording	Start manual record
Start talk	Start or stop talk	Camera Configuration	Enter the interface of the area and Camera configuration
Stream	Choose stream to view.	PTZ Control	To display the control panel of PTZ
Enable Audio	Enable or close audio	Close Preview	Close single channel preview
Full Screen	To display in full screen		

5.1 Preview


5.1.1 Monitory Point Preview

 To start the live preview, drag the cameras from the list to the right display window or select a window and double-click the camera to display the live image. You can drag the image to any window at random.

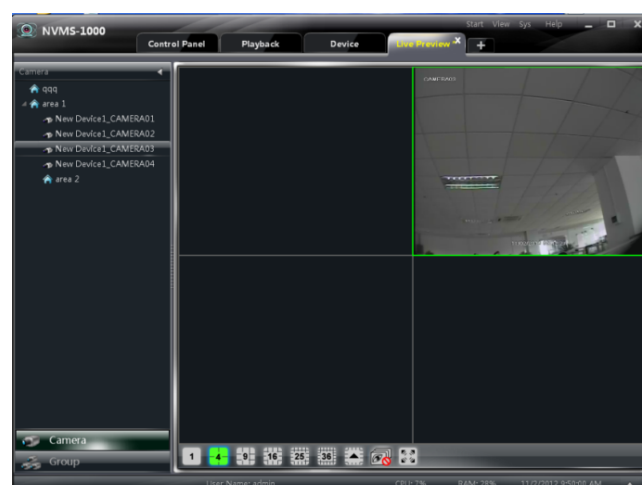

5.1.2 Stop Preview


➤ Close Preview of Channel

 
Place your mouse on the window to display the menu toolbar, then click  icon to close preview of this channel.

➤ Close Preview by Right-clicking


Choose “*Close Preview*” by right-clicking the display window to close preview of this channel.

➤ Close All Preview

Click  icon on the main menu toolbar to close all the windows.

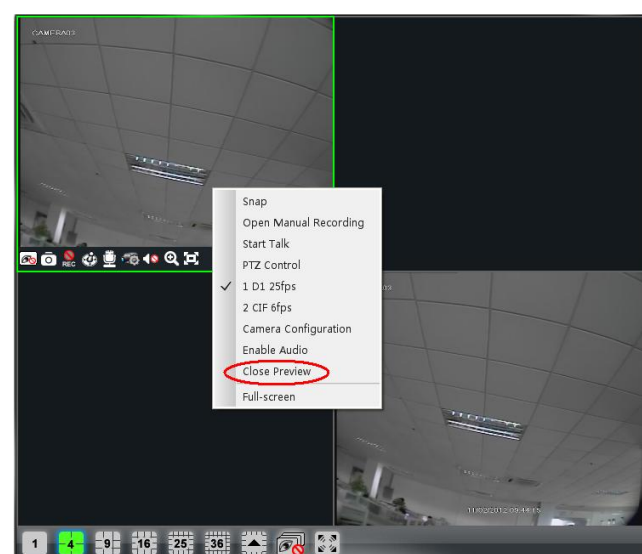



5.2 Dwell Preview

After setting up group or scheme (Please refer to chapter 4 for creating group), enter to the live preview interface and click  button to display the the group list or scheme list. The below sections will introduce how to realize group dwell and scheme dwell.


NVMS User Manual

 
5.2.1 Group Dwell Preview

➤ Start Group Dwell

In the interface of live preview, click  shortcut on the left side to display the groups, drag a group under scheme to any window( icon stands for group). The cameras of this group will play one by one on this window at the set time.



➤ Stop Group Dwell

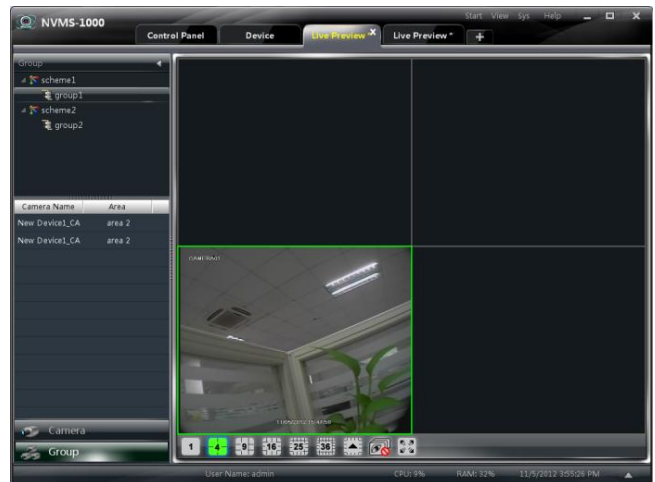Right click the display window to select “Close Preview” to close preview of the this channel or click  icon on the main menu bar to close all windows for stopping dwell.




5.2.2 Scheme Dwell Preview

 
➤ Start Scheme Dwell

In the interface of live preview, click  shortcut on the left side and then drag a scheme to the right window to dwell ( icon stands for scheme). The screen mode will be distributed automatically according to the the number of camera under the group

Note : To achieve dwell between devices, the device should be as a unit when adding groups. Then add all the groups into one scheme to dwell.


➤ Stop Scheme Dwell

Click  icon to close all the windows for stopping scheme dwell.

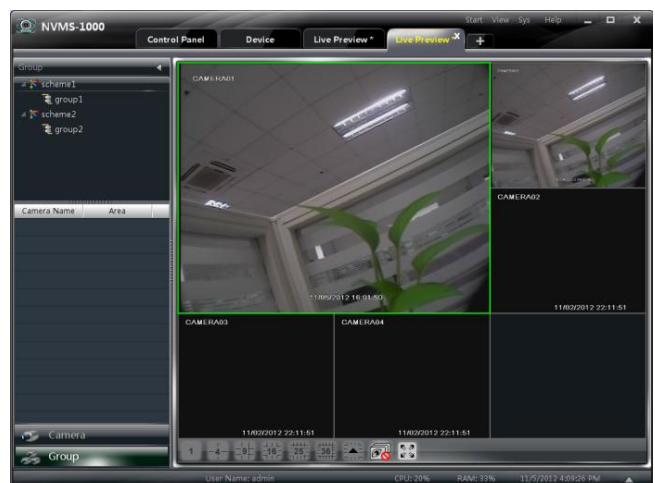

5.3 Preview Control

➤ Full Screen

 
Click  icon on the display window or right-click to choose “Full Screen” to view in full screen. Right-click to choose “Exit Full Screen” to exit full screen preview.

➤ Single Channel in Full Screen

Double click the selected window to view in full screen. Double click again to recover the window.


➤ Stream of Live Preview

Right click on the display window to choose recording stream as shown on the right. The above stream is main

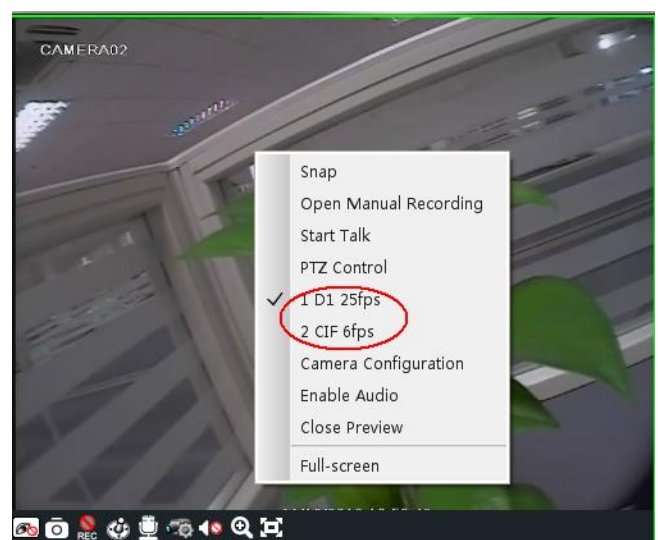


NVMS User Manual

 
stream (eg: D1 25fps) and the below is sub stream(eg: CIF 6fps).

Modify Device Stream: Click  button on the display window to enter the Area and Camera Management interface. Click **“Image Quality”** under Image Setting to modify device stream. Please refer to chapter 3.3.2 Image Settings for details.



➤ Audio


Right click on the displaying window to choose “Enable Audio” or click  icon to enable audio of this channel.

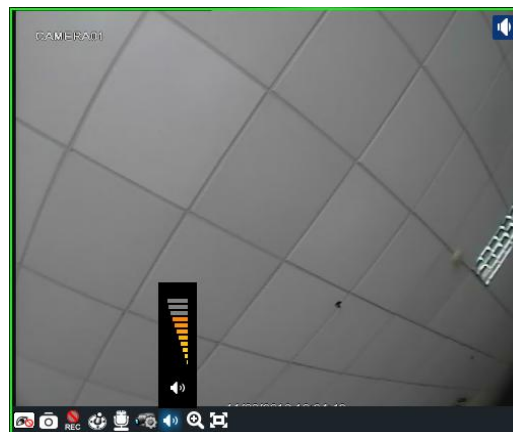Note: Only one audio can be enabled at the same time. If enabling another channel's audio, the enabled audio will be closed automatically.




➤ Zoom In

 Click  icon on the toolbar in the displaying window to zoom in the image; click  icon to recover the image.

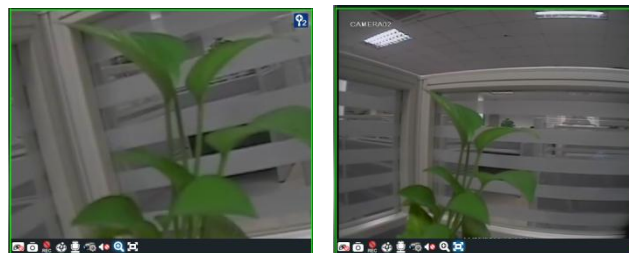

5.4 Snap

5.4.1 Snap

click  button on the toolbar of the selected channel or right click to choose **“Snap”** to capture the pictures.

After snapping pictures, a message prompt box will pop up to remind you the pictures are captured successfully and where the pictures are stored .

Note: Capturing pictures can be realized only in live preview or playback.



5.4.2 Snap Number


In the interface of control panel, click **“Set Snap Default Number”** under **Basic** to configure the number you want to capture every time .

 
NVMS User Manual


5.4.3 Record and Snap Path


In the control panel, click **“Basic”** to enter the interface. Click **“Partition and Path”** to select a folder to save the record files. Click **“Set the Default Path of Snap”** under Partition and Path to set up the path to save the snap files.

5.5 Multi-screen to Preview

In the interface of live preview, click  button to plus a tab of live preview. Drag any tab of live preview or right click the tab of live preview to select **“Float”** to pop up a independent live preview interface as below. Multit-screen to display can be realized by dragging the independent interface to other screen (graphics card should support multit-screen output at the same time).

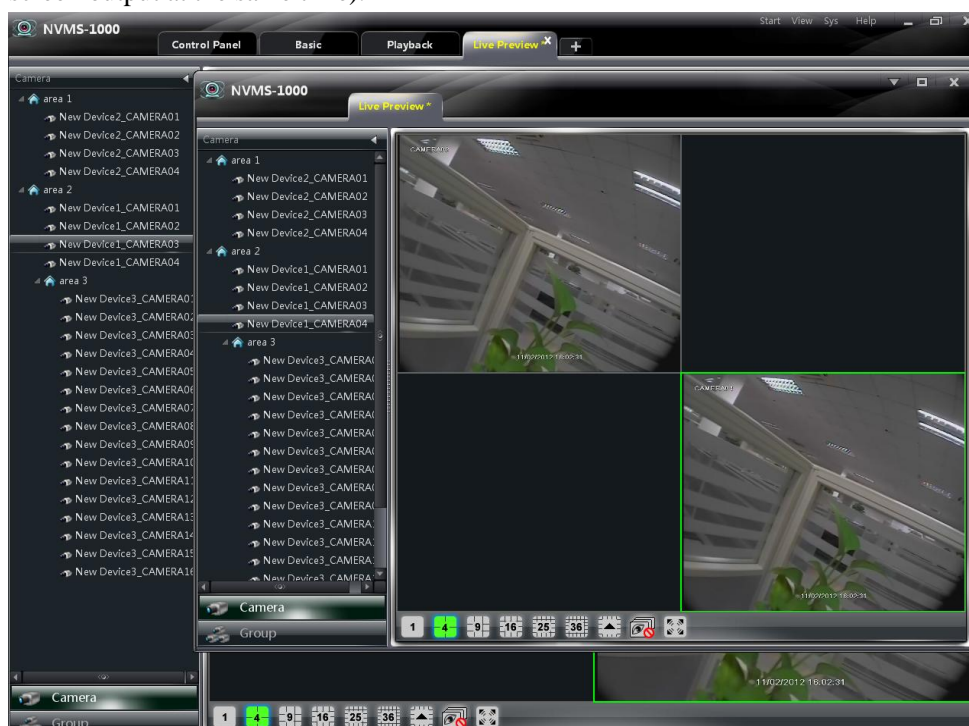

 Clicking the  button of the live preview interface to choose **“Tab view”** can embed this tab in main interface .

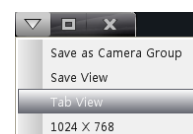


Note : 1. 20 live preview tabs can be added.

 
2. Live preview interface can be displayed on multiple screens.

5.6 Talk and Broadcast

5.6.1 Talk



Click  button on display window or right click to pop up a menu bar. Choose **“Start Talk”** to enable bidirectional audio.


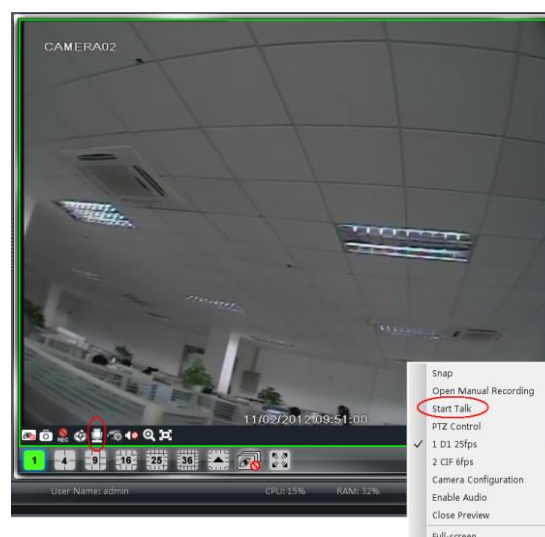
Note: Since NVMS-1000 only allow to open one device's talk at the same time, the system will stop talk with the current device for enabling new talk with another device which is launching talk.



NVMS User Manual


5.6.2 Broadcast

  - ① Click **"System"** on the menu bar of software at the upper right ; choose **"Broadcast"** to enter the interface.
- ② Click  button to pop up a window; then check the devices you want to broadcast, click **【OK】** button to save the setting.
- ③ Click  button to stop broadcast.

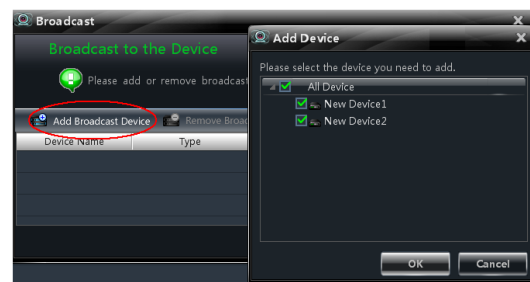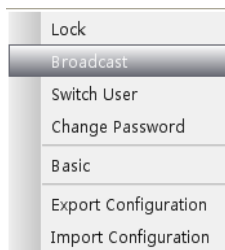

5.7 PTZ Control






5.7.1 Parameter Configuration of PTZ

 
Please confirm the parameter of PTZ has been configured correctly before operating PTZ. Click  icon in display window or **"Change Camera Setting"** under **"Device"** to enter the interface. Click **"PTZ Setting"** to enable PTZ and setup protocol, baud rate and address of PTZ.

Note: Here the protocol, baud rate and address of PTZ must be consistent with the PTZ decoder.

5.7.2 PTZ control

Return to the live preview interface after configuring parameter of PTZ; select the channel and click  icon or right click to choose **"PTZ Control"** to open the control panel of PTZ.


- Click the direction buttons to control its rotational direction; drag the slider to control its speed.
- Click  and  buttons to adjust focus, iris and zoom.
- Select a preset point and click  to operate this preset point or double click the preset point to operate it.
- Click **【Cruise】** button to list the cruises. Select a cruise and click  button to cruise; click  button to stop cruising.

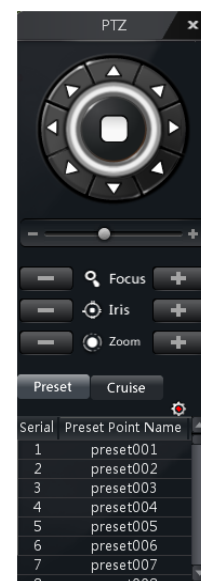

6 Record Management

NVMS-1000 supports manual record, schedule record, motion detection record and sensor alarm record. This chapter will introduce the above four record types respectively.

6.1 Manual Record

Select a channel and click  button or right click to choose “Open Manual Recording” to start recording.

 
Then click  button or right click to choose “Close the Manual Recording” to stop recording.

Note : If a channel is recording, closing preview will give rise to stopping it

6.2 Schedule Record


In the control panel, click “*Change Camera Settings*” under Device to enter the interface.

Select a camera and click “*Record Settings*” as shown on the right figure.

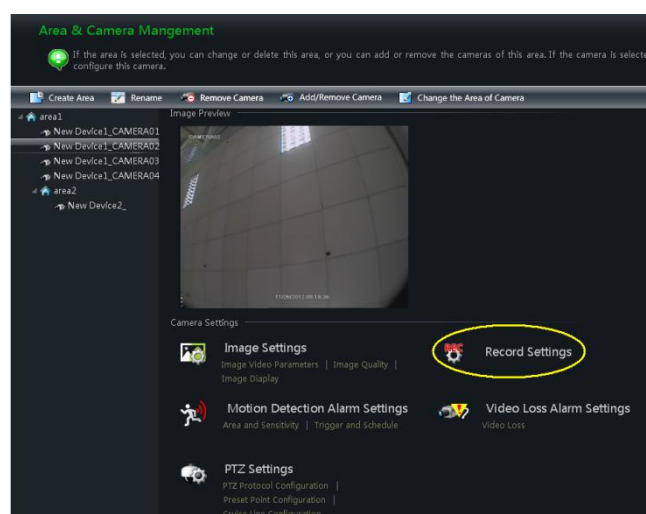

Under record of system , you can choose record stream and set record schedule.

 
Note: Please refer to section 3.2.2 for details.

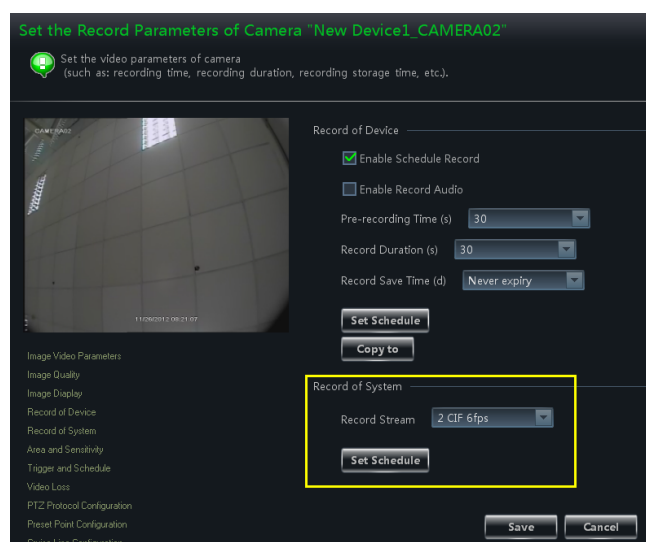


6.3 Motion Detection Record

In the control panel, click **“Change Camera Settings”** under Device to enter the interface.

 Select a camera and click **“Trigger and Schedule”** under Motion Detection Alarm Settings as shown on the right figure.

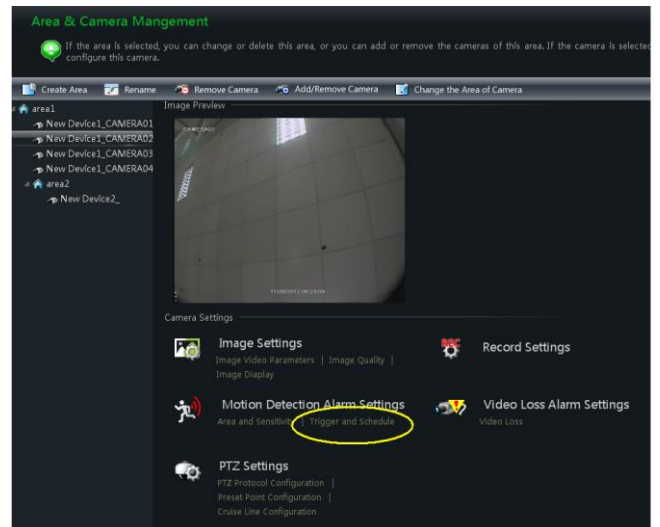

 
Under system linkage, click **Trigger the Record Channel** button to select channel. The selected channel whose motion detection alarm is triggered will be recorded automatically.

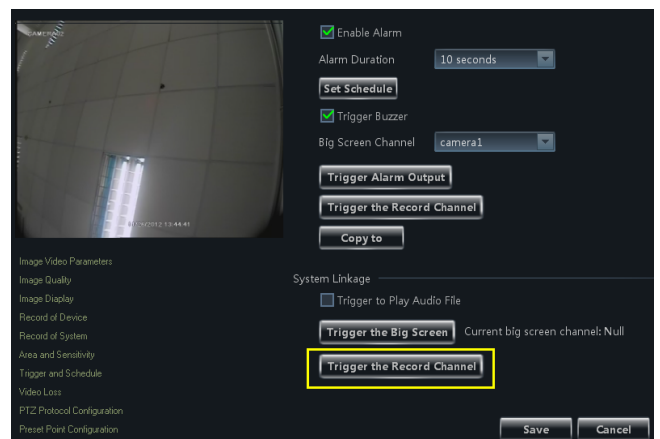



6.4 Sensor Alarm Record

In the control panel, click **“Change Camera Settings”** under Device to enter the interface.

 Select a sensor and click **Alarm Link Setup** button as shown on the right.

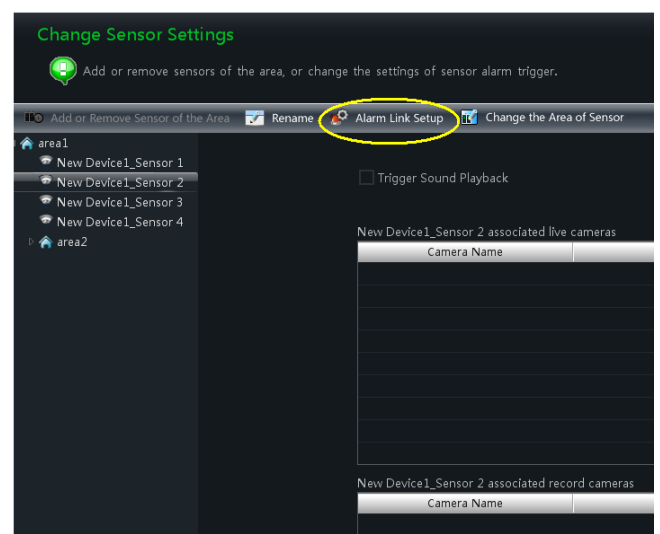


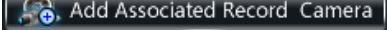 Click  button to choose associated record cameras. When the sensor alarm is triggered, the selected cameras will be recorded automatically.

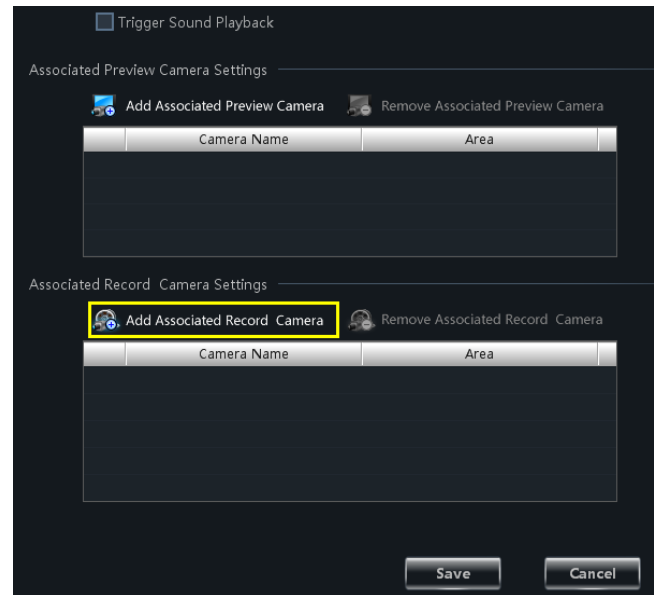


6.5 Set Record Partition

 In the control panel, click “*Set Record Partition*” under Playback as below. You can choose a partition for storing record.

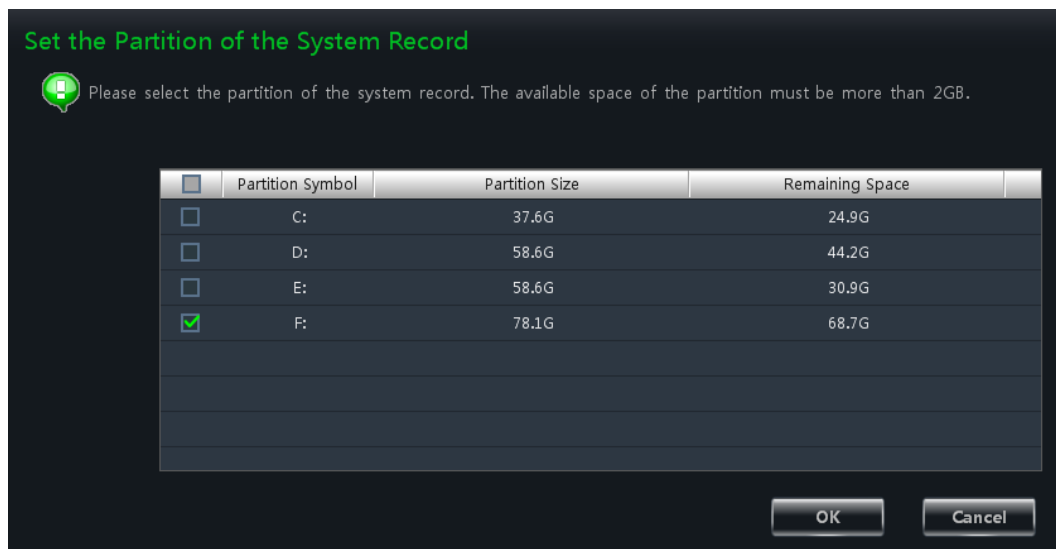

7 Playback Management

 In the interface of control panel, click “Playback” to enter the interface. You can play back the local stored record files.

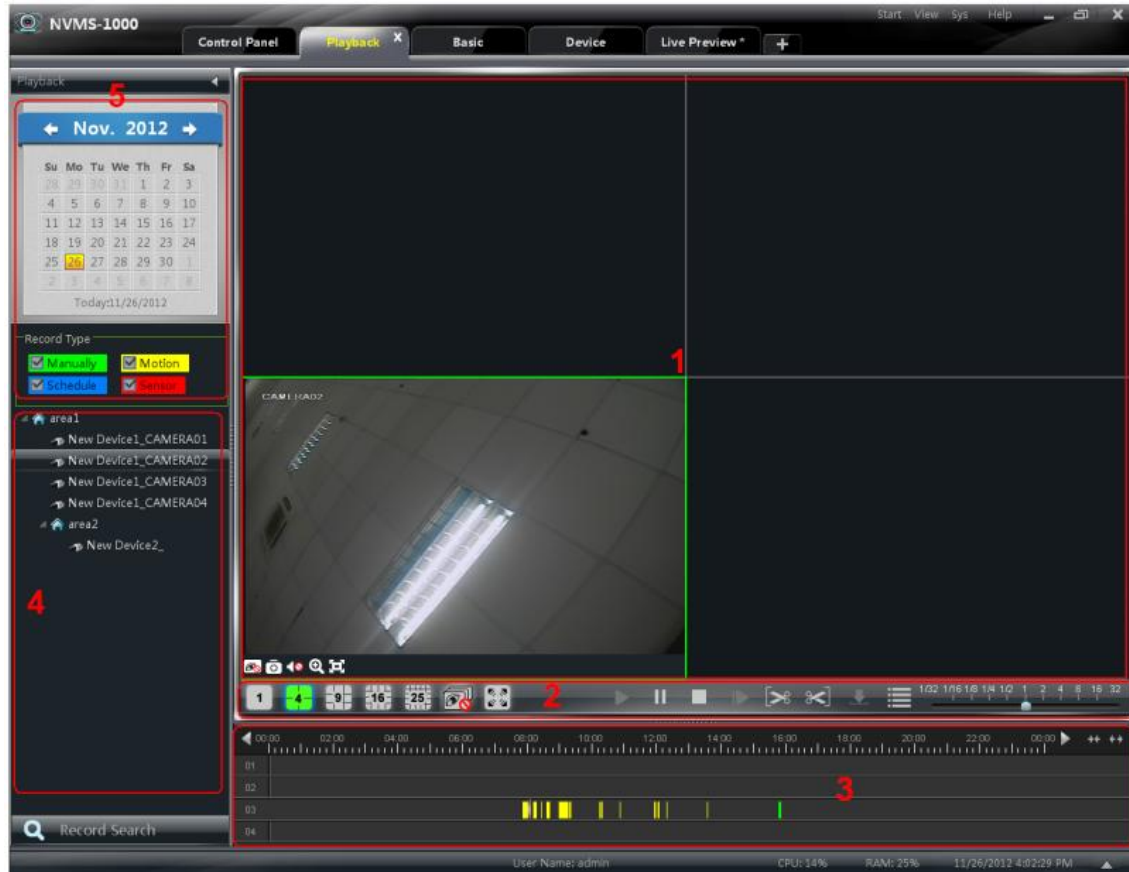






Area Descriptions:

Area	Description	Area	Description
1	Playback Area	2	Toolbar
3	Record time Area	4	Resources Area
5	Time search or type search Area		






Buttons Description of Area 2

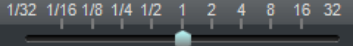Icon	Description
	Screen mode. 1,4,9,16,25 channels are optional
	Close playback of all channels
	Full screen
	Play
	Pause
	Stop
	Playback by single frame. When playback, click button firstly and then click this button to play frame by frame.

NVMS User Manual



	Backup the start time
	Backup the end time
	Download
	Event list. Click this button to pop up the event list
	Playback speed bar

Toolbar on Playback Window:

Icon	Description	Icon	Description
	Close playback		Snap
	Open/close audio		Zoom in
	Fit to window		

 
7.1 playback

In the playback interface, select date and record type, then drag the camera to the right display window for playing .



you can click  button to search the record file , then click  button to playback.


Playback Record type includes manual record, motion detection record, schedule record, and sensor record.

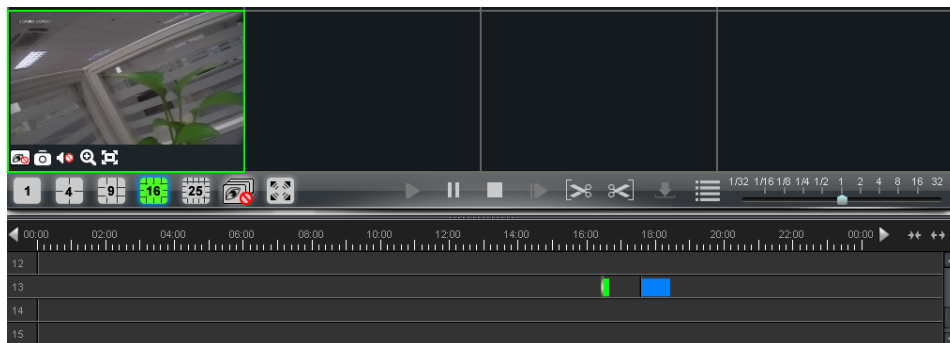In the timeline, green bar stands for manual record data; yellow bar stands for motion record data; blue bar stands for schedule record data; red bar stands for sensor record data.





 
7.1.1 Playback by Setting Time

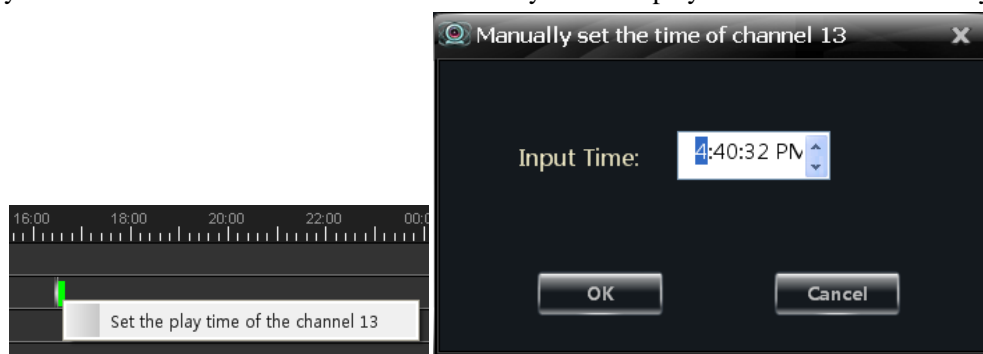
Right click the color bar to select *“Set the Play Time of the Channel X”*, then a dialog window pops up. Input time manually or click   button to select time. The system will play the video from the time you set.




7.1.2 Playback by Searching Event

Click  button to display the event list. Double click an event to play this event record.

Note:  and  buttons on the timeline are used to expand and narrow down the time bar, so you can choose a more accurate playback time.

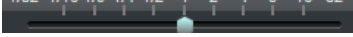


What's more, you may also change playback speed by dragging  bar.

7.2 Snap When Playback

Click  button on the playing window to capture pictures. A message prompt will pop up after snapping.

7.3 Clip and Backup Record


7.3.1 Clip and Backup Record

When playing back record file, click  button to set the start time; click  button to set the end time. then click  button to download the video files within the configured time.

Note: The default path is C:\\backup.

7.3.2 Backup Path Configuration


In the control panel interface, click **Basic** to enter the interface. Then click **“Backup Path Settings”** to choose path to save.

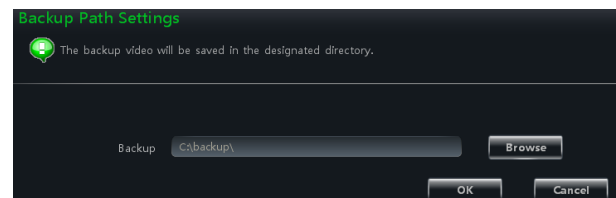


8 Alarm Management



 8.1 Sensor Alarm

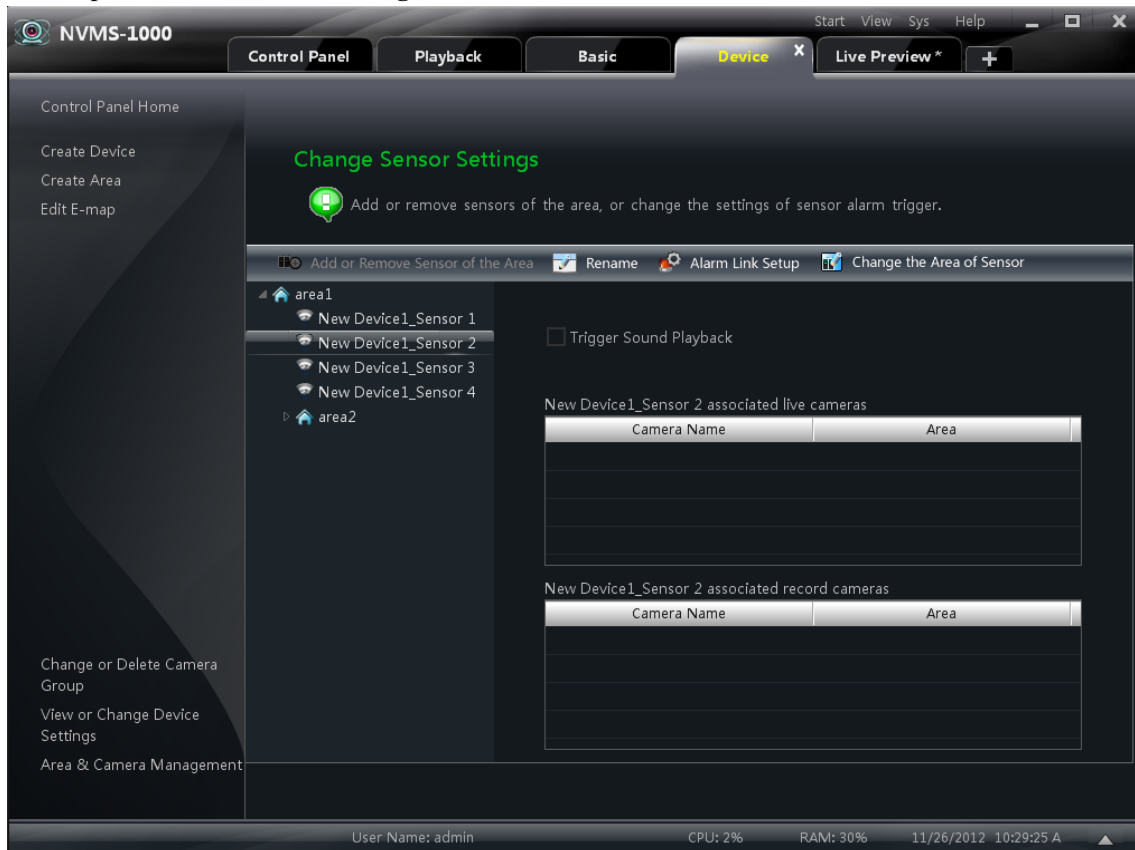
In the control panel, click “**Alarm Management**” to enter the interface.



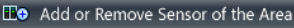

➤ Add or Remove Sensor of the Area

 In the interface of Alarm Management, choose an area, click  button to enter the interface.

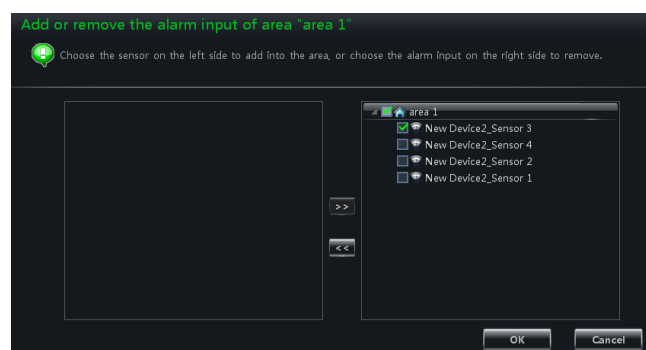- ① Check the sensor under the area on the right and click  button to move out the sensor .
- ② Check the sensor on the left and click  button to add sensor.




➤ Rename or Change Area

 
In the interface of Alarm Management, choose a sensor and click  button to change its name; click  button to change the area of sensor.

NVMS User Manual


➤ Alarm Link Setup

In the interface of Alarm Management, choose a sensor and click  button to enter the interface.


If checking “*Trigger Alarm Playback*”, there will be a sound like “beep” when sensor alarm is triggered.

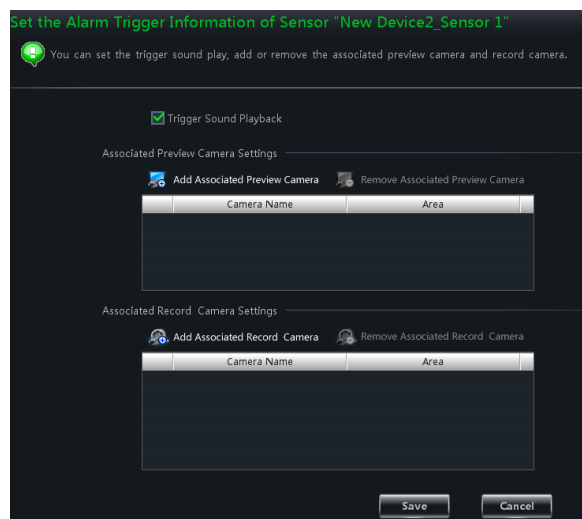


◆ Add Associated Preview Camera

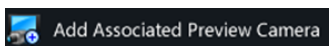Click  to pop up a window; check cameras and click **【OK】** button to save the setting. When sensor alarm is triggered, the alarm preview and e-map preview will pop up automatically.

 Select the added camera, click  to remove the camera.

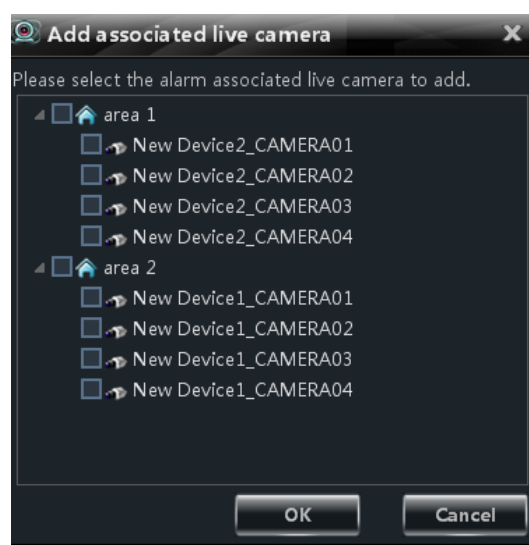

◆ Add Associated Record Camera

 
Click  to enter the interface; check the associated cameras and click **【OK】** button to save the setting. When the sensor alarm is triggered, the selected channels will be recorded automatically.

Select the added camera, click  to remove the camera

8.2 Motion Detection Alarm

In the control panel, click “*Change Camera Settings*” under Device.


Select a camera and click “*Motion Detection Alarm Setting*” to enter the interface as right. You can adjust the detection sensitivity and setup the motion area.

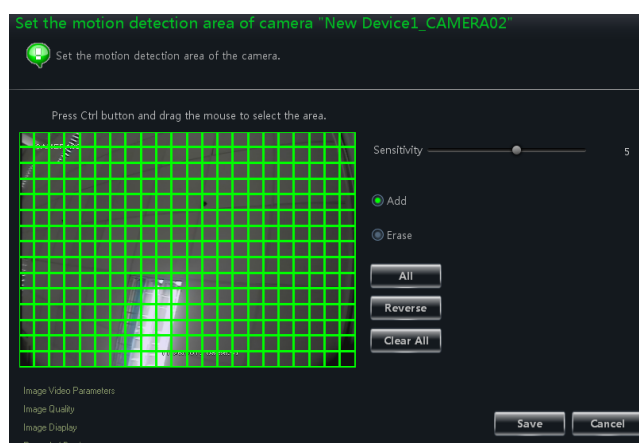

NVMS User Manual

Click **“Trigger and Schedule”** to enter the interface as shown on the right.

 Please refer to section 3.3.2 for details.

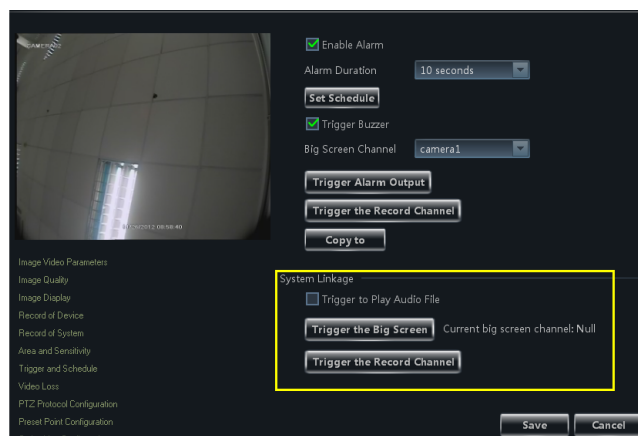


8.3 Video Loss Alarm

In the control panel, click **“Change Camera Settings”** under Device.

Choose a camera and click **“Video Loss Alarm Setting”** to enter the interface.

 Please refer to section 3.3.2 for details.

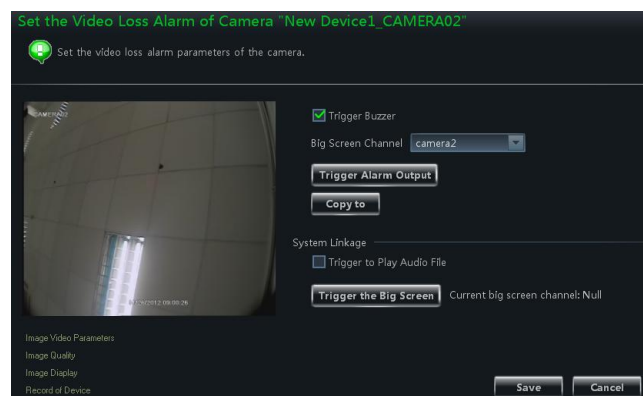


8.4 Alarm Preview

The interface of alarm preview will automatically pop up if the relevant alarm page and alarm preview have been already configured.

8.4.1 Alarm Preview Configuration

■ **Motion Detection Alarm:** In the control panel, click **“Change Camera Settings”** under *Device* to enter the interface. Select a camera, and then click **“Trigger and Schedule”** shortcut under Motion Detection Alarm Settings to appear a window; click **【Trigger the Big Screen】** button under system linkage to select channel.

 
■ **Video Loss Alarm:** Click **“Video Loss”** to enter the interface; click **【Trigger the Big Screen】** button under System Linkage to select channel.

■ **Sensor Alarm:** In the control panel, click **“Alarm Management”** to enter the interface. Click  button to add the associated preview cameras.

NVMS User Manual


In the control panel, click “*Change Alarm Preview Settings*” under Live Preview to pop up the window


- ① Alarm preview will pop up automatically when alarm is triggered if checking “Automatic Pop-up Alarm Page”.
- ② Alarm preview will pop up automatically in full screen when alarm is triggered if checking “Full Screen Display When Popping Up”.
- ③ Choose a display monitor from the “Full Screen Display” drop-down menu. The alarm image will display on the designated monitor when alarm is triggered.
- ④ Choose the number of screen.

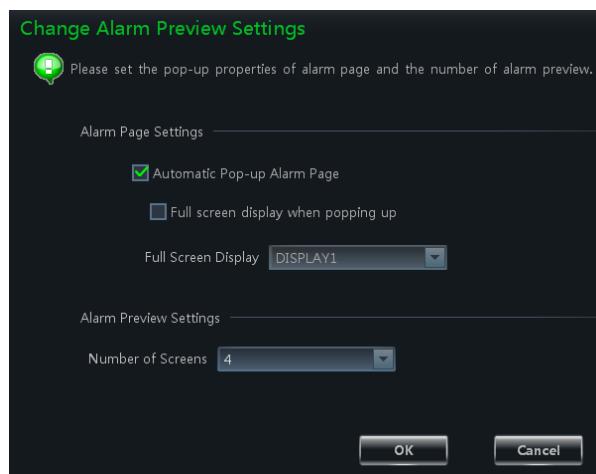

8.4.2 Alarm Preview

 After configuring the alarm, the alarm preview will automatically pop up if the alarm of selected channels is triggered. The default pop-up window of system is independent interface. Please refer to the below figure.

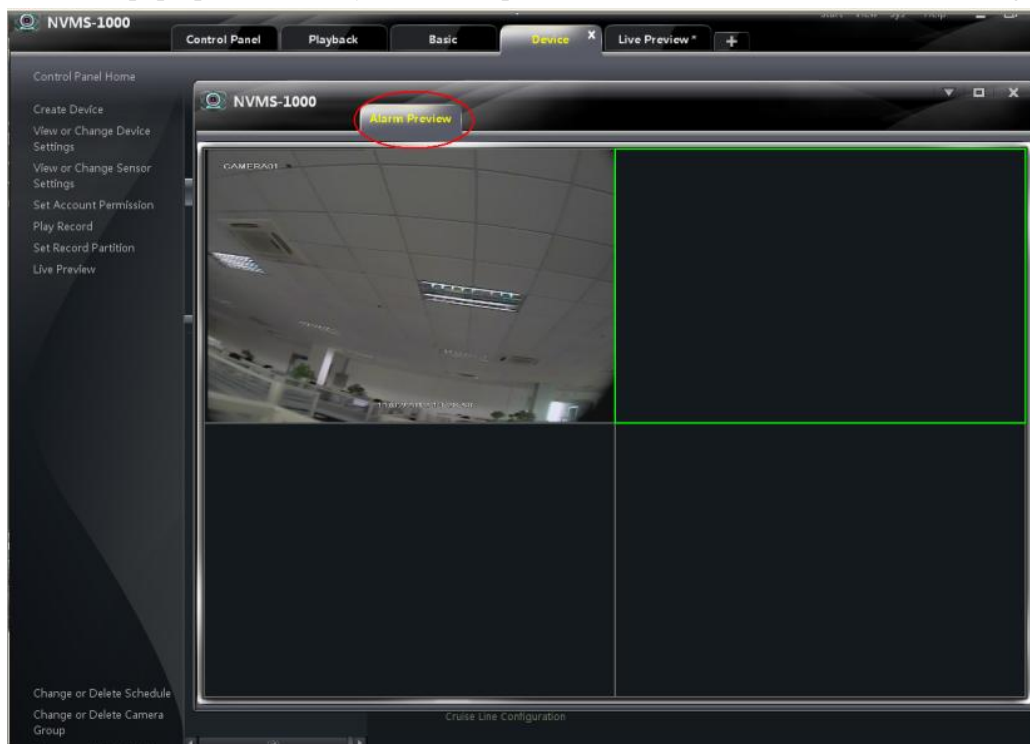

Click  button on the upper right corner of the sub interface; then select “*Tab View*” to embed the sub interface in the main interface.



 
9 E-Map

In the control panel, click “**E-Map**” to enter the interface as below:




9.1 Create map

In the E-map interface, click **【Shortcuts】** button on the left side to appear the shortcut menu, then click “**Create Map File**” to enter the interface. Import a map and edit a name for it.

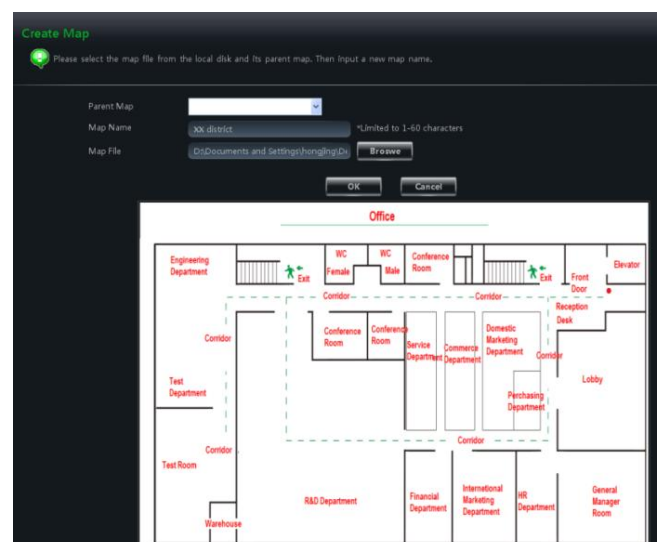

9.2 Modify or Delete Map, Hotspot and Hotzone

 In the E-map interface, click “**Edit E-map**” on the left side to enter the interface.

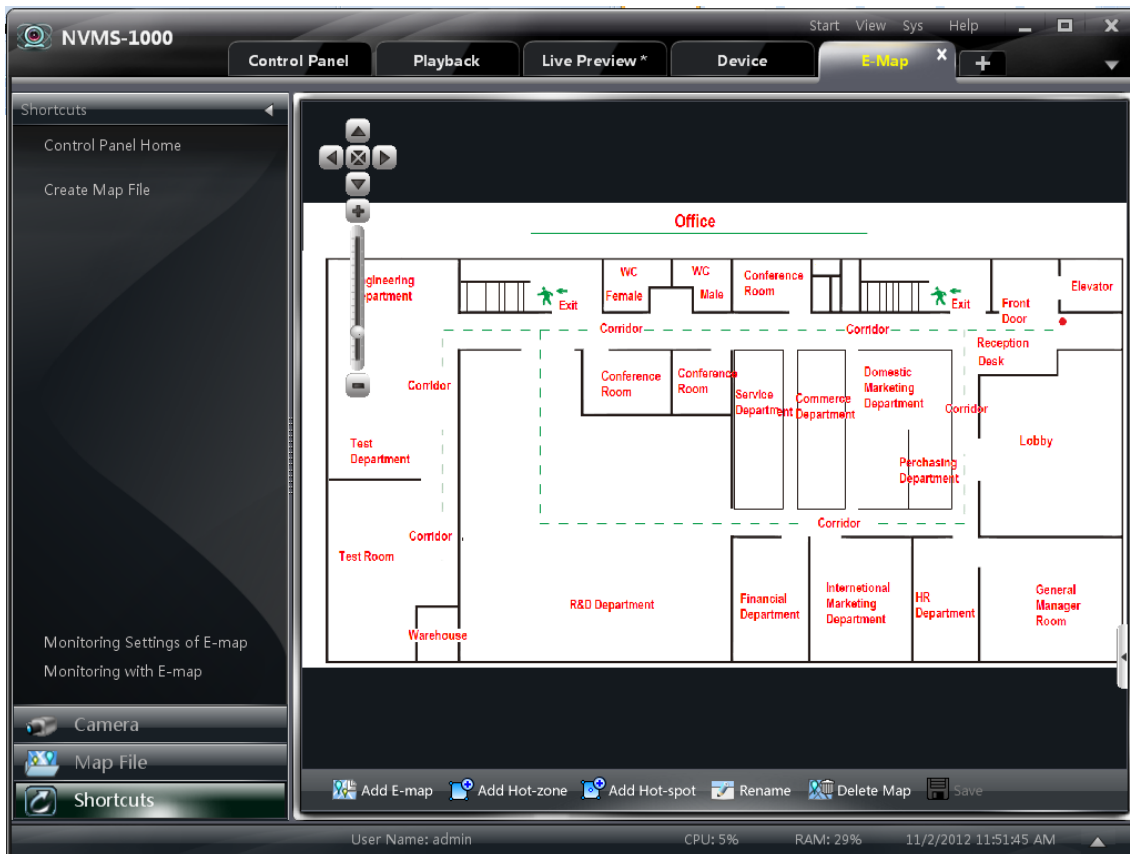

9.2.1 Change or Delete Map

In the above interface, click **“Map File”** to appear the map files on the left side. Choose a map and click



to change a new name for it.



9.2.2 Add, Change and Delete Hotzone

➤ Add Hotzone

 
Click **“Map File”** and choose a map and then click



icon to pop up a dialog widow.


- ① Check a map related the hotzone
- ② Click  to choose text color displaying under the hotzone icon.
- ③ Click  to choose icons for the hotzones.

After finishing, double clicking a hotzone will lead you to enter this map.

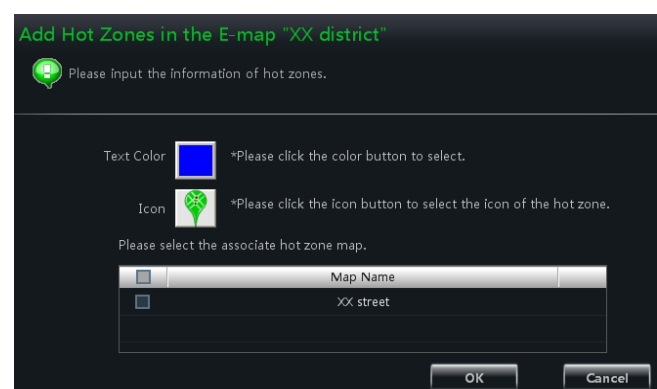


➤ Modify and Delete Hotzone

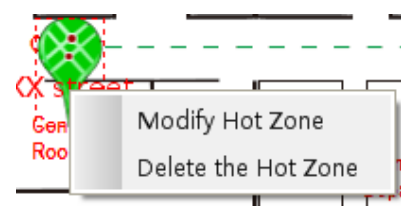 

Right-click a hotzone on the map. Choose **“Modify Hotzone”** or **“Delete the Hotzone”** to change font color, icon or name or delete it.



NVMS User Manual


9.2.3 Add, Change and Delete Hotspot

 
In the E-map interface, choose a map, click  to enter the interface.

- ① Check associated cameras and sensors
- ② Click  to choose text color displaying under hotspot.
- ③ Click  to choose an icon for the hotspot
- ④ Edit a name for the hotspot.

There is another way to add hotspot.

Select a map and double click the camera, or drag the camera to the map for adding hotspot.


Note: The hotzones or hotspots will focus on the map in the same position after being added. You should drag them to the corresponding positions on the map. Click  to save the settings.

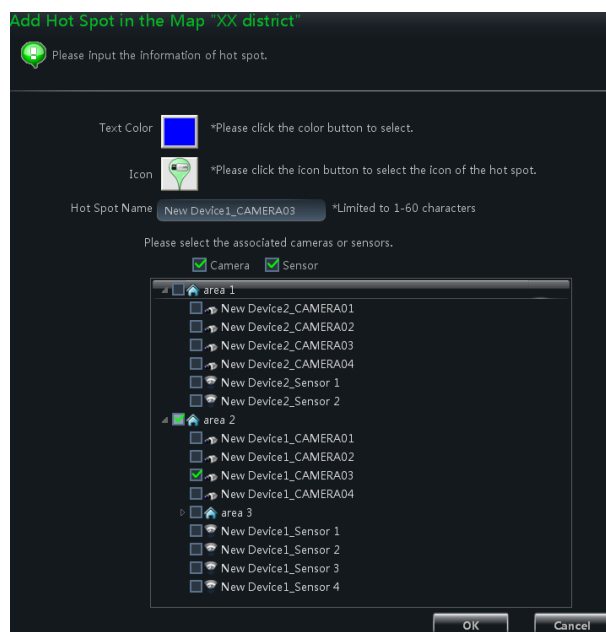

9.3 E-map Monitoring Settings

In the E-map interface, click **“Monitory Settings of E-map”** on the left side to enter the interface.

 Check **“Automatic Pop-up Alarm Preview Window”**, then click **【OK】** button to save the setting. If the configured hot spots raise the alarm, the preview image will pop up automatically

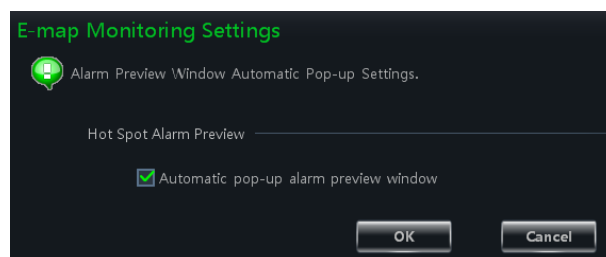


9.4 E-map live preview

In the E-map interface, click **“Monitory with E-map”** on the left side to enter the interface.

Note: If the item “Edit E-map” appears on the below of menu bar in the E-map interface, the current interface is monitory with E-map interface. Double clicking a hotspot will switch to the its map

The icon of hotspot will become a flashing light if this hotspot raises the alarm. What’s more, there will be preview windows on the right side if you had checked **“Automatic Pop-up Alarm Preview Window”**. Clicking the alarm preview image will switch to the map whose hotspot issues alarm.

 NVMS User Manual

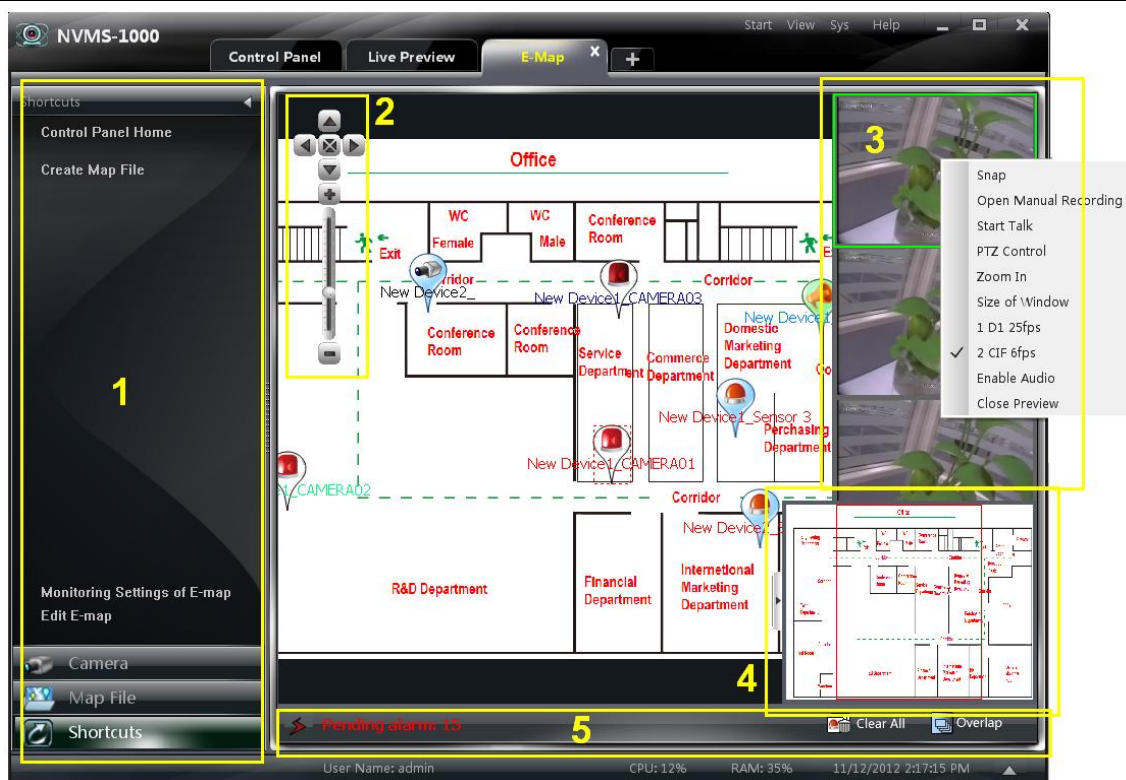



Area Description:

Area	Description
1	Menu bar
2	Zoom in/out the map
3	Alarm preview
4	Overall display of map(suppressible)
5	Alarm message prompts


Right Click on the Alarm Preview Window:

Item	Description	Item	Description
Snap	Picture capture	Open Manual Recording	Start manual record
Start Talk	Start talk	PTZ control	Click to display PTZ control panel
Zoom in	Zoom in the image	Size of window	Recover the image size
Stream	Choose stream to view	Enable audio	Enable audio
Close pre-view	Stop preview of single channel		

Click  **Clear All** to clear all the number of alarm


Click  **Overlap** to make the alarm preview windows to overlap together. You can drag each window to view respectively .

 NVMS User Manual

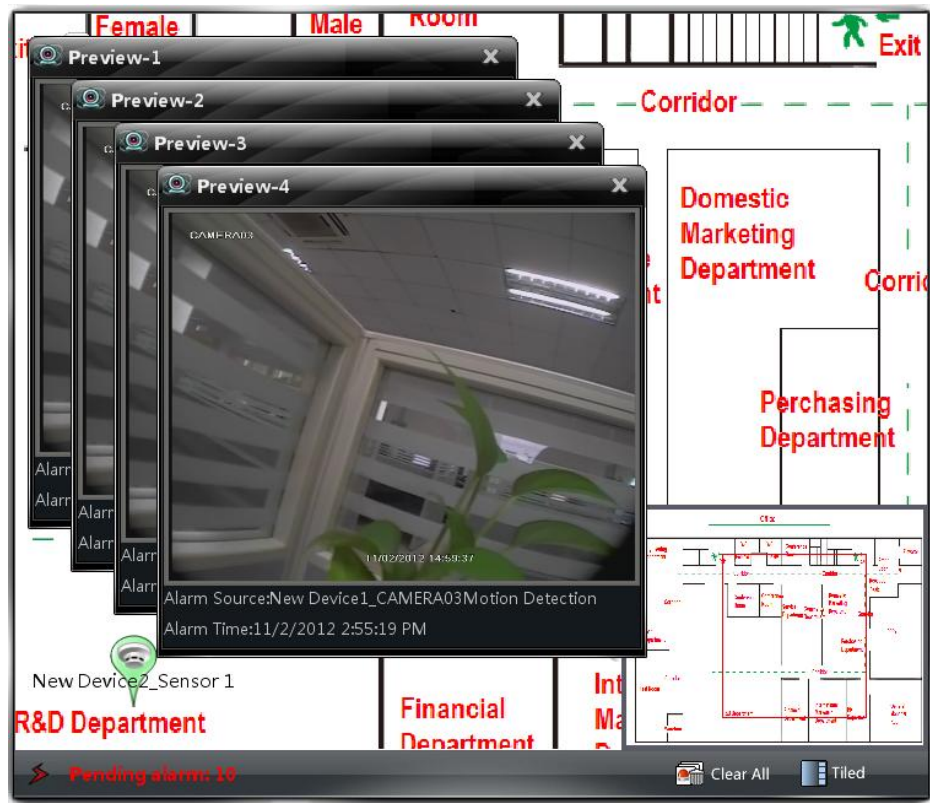

click  button to tile the alarm preview windows on the right side.

 
Right click on the map to pop up a menu bar. Choose “Full Screen” to view the image in full screen.

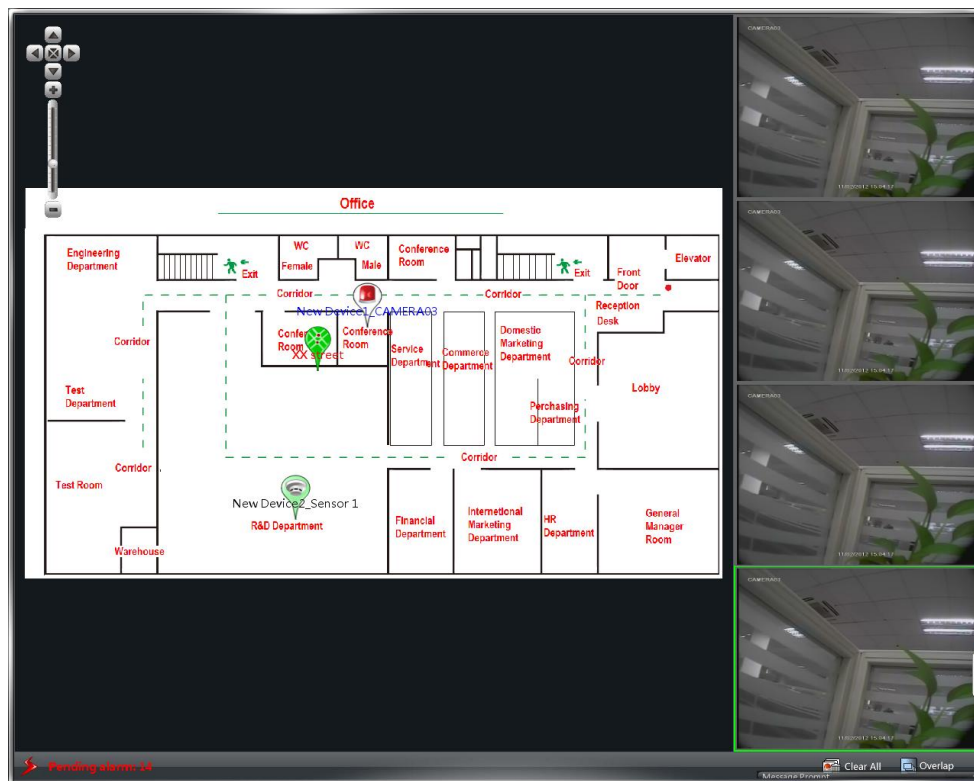

Right click on the map to choose “Exit Full Screen” to exit.

10 Local Log

 In the interface of control panel, click **“Local Log”** to enter the interface.

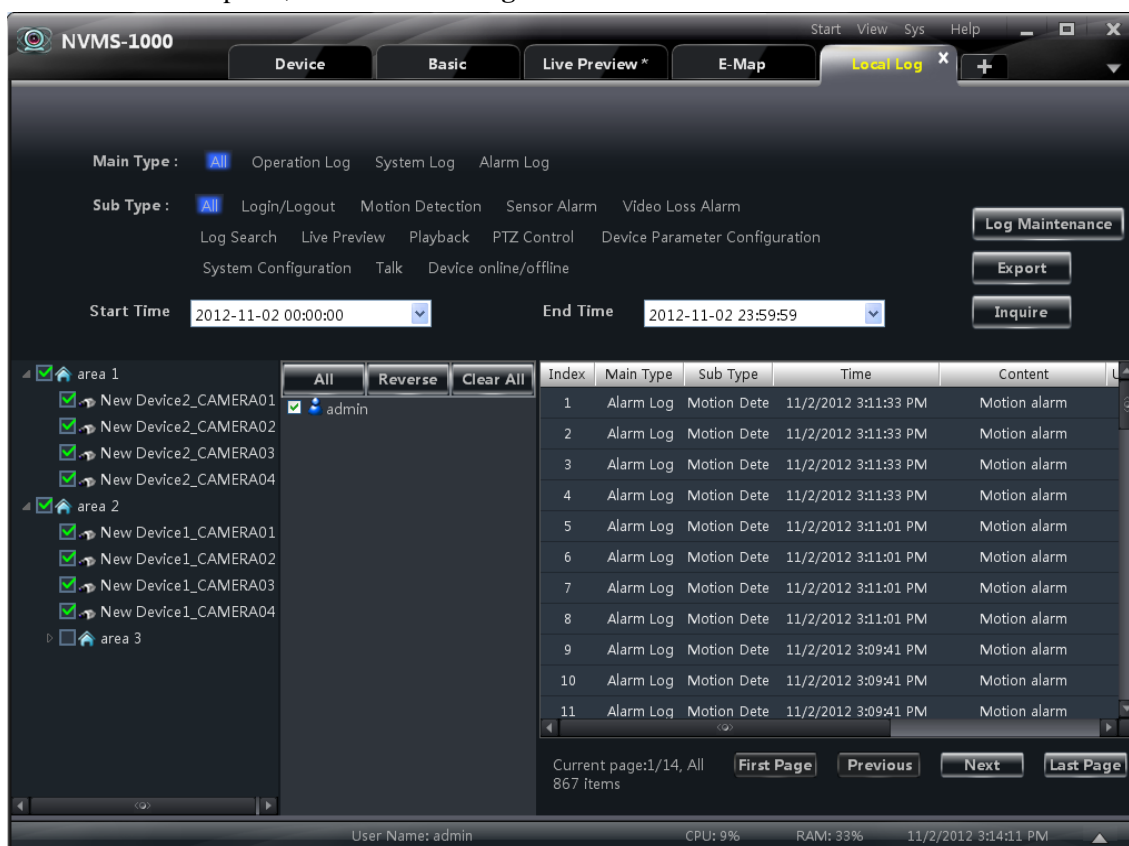


10.1 Search log

Choose main type, sub type , set the start time and end time, click **【Inquire】** button to search the relvent log information. click **【Frst page】** **【Previous】** **【Next】** **【Last page】** to view the information on different pages.

10.2 Log Maintenace

 In the log interface, click **Log Maintenance** button to pop up a dialog window. You can save the information of log for a certain time by configuration in this interface.

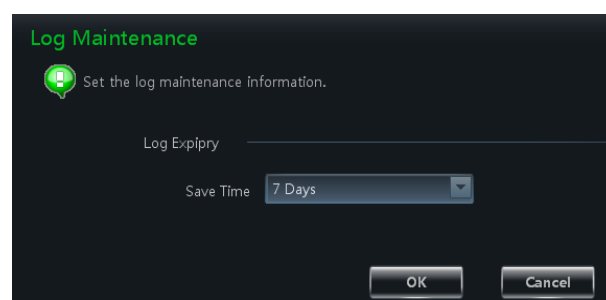


10.3 Export

In the log interface, click **Export** button , then choose a storge path to export the log information.

11 User Management

In the interface of control panel, click “User Management” to enter the interface.

 There is only one super user registered by you when firstly log in the system. You can add several users and set right for them through the function of “Set Account Right”.

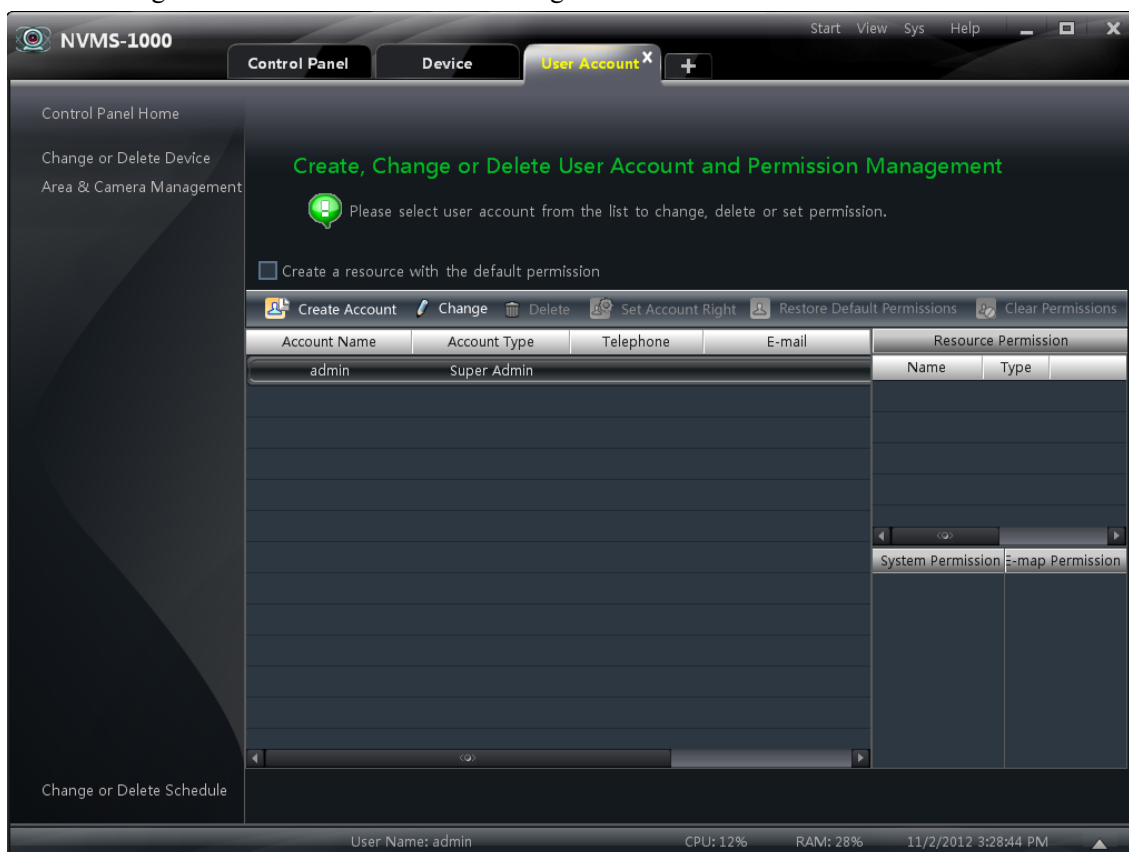


11.1 Create a Resource with the Default Permission

In the above interface, checking “*Create a Resource with the Default Permission*” means that permission of new resources will be given to all the users if you are going to create new resources.

11.2 Create, change and delete users

➤ Create Account

In the interface of User Management, click  **Create Account** to pop up a dialog window. Input account name and password. Choose account type and default right.

You can bind account by e-mail or telephone and add description if you wish.


Note: • Two types of user: administrator and operator. administrator enjoys all the system permissions except account and permission management.

Operator only enjoy the permissions of broadcast, searching and exporting log


NVMS User Manual

 
- If you have checked “Default Permission” under initial permission when creating new account, all the resource permissions and system permissions will be added for the user

➤ Change Account


In the interface of User Management, select a user and click  button to enter the interface. You can change account name, password, e-mail address, etc. according to need.


➤ Delete Account

In the interface of User management, select a user and click  button to delete it .

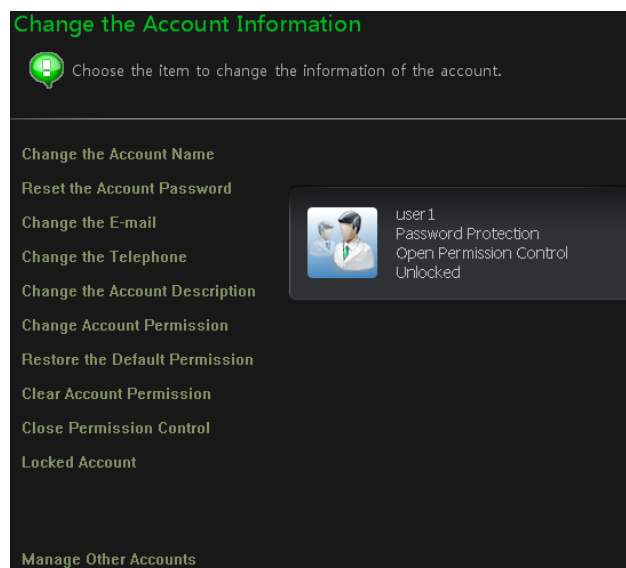


11.3 Account Right Configuration

 In the interface of User Management, select a user, then click  to enter the interface.

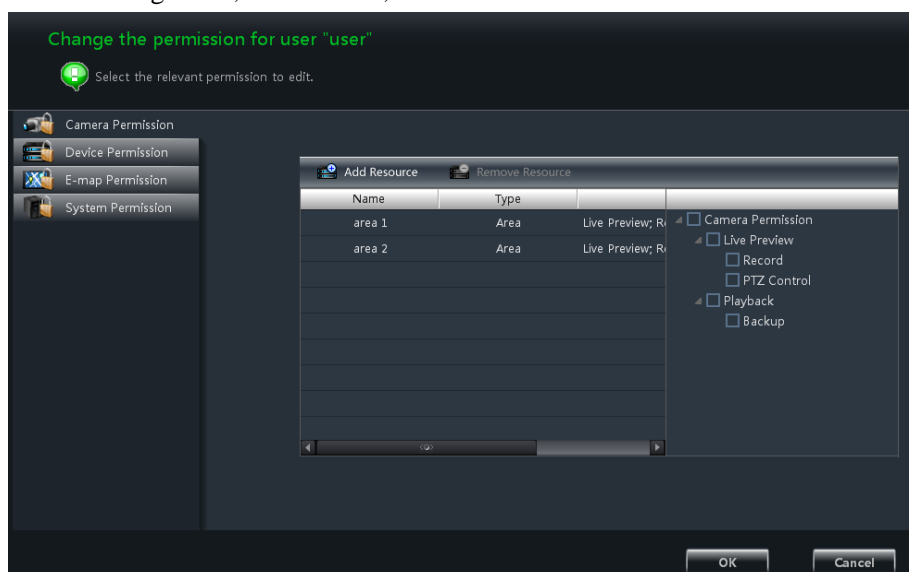

➤ Camera Permission

 
In the interface of Camera Permission, click  button to add resources, check camera permissions on the right. You can add different permissions for different users.



NVMS User Manual


➤ Device Permission

Click “*Device Permission*” to enter the interface.
Select the right on the right hand you want to enjoy.

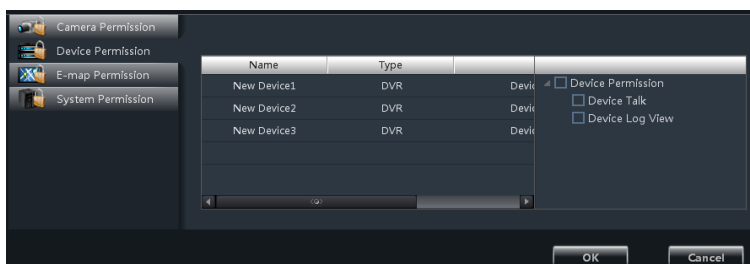


➤ E-map Permission

 Click “*E-map Permission*” to enter the interface.
Add map permission for the selected user.

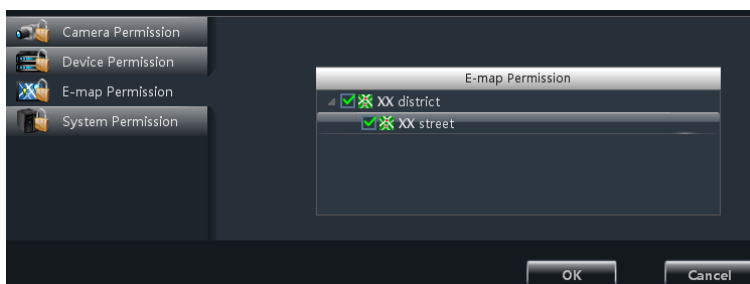


➤ System Permission

 
Click “*System Permission*” to enter the interface,
you can set the right of broadcast , searching log
information and exporting it for the user you
selected.

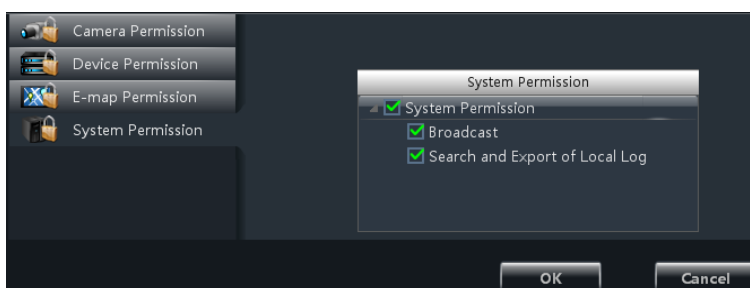

➤ Restore Default Permission

In the interface of account right management, select a user and click  to restore default permission of this user.

➤ Clear Permission

In the interface of account right management, select a user and click  to clear this user's permission.

12 Basic

In the interface of control panel, click “**Basic**” to enter the interface. System startup and maintenance, backup and restore will be introduced in this chapter. Partition and Path configuration have been introduced in the above chapter, there we do not repeat again.

 


12.1 System Startup and Maintenance

In the interface of Basic Configuration, click “**System Startup and Maintenance**” to enter the interface.

Under the system startup settings, two ways to enable the software can be select.

If checking “Automatically Restart Your Computer”, user name and password of the computer need to be input; time interval and restart time need to be selected.

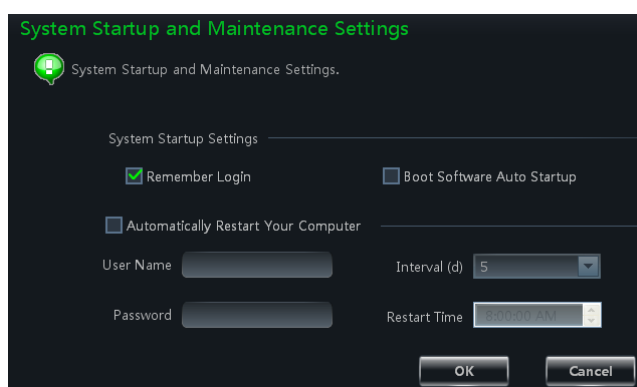


12.2 Backup and Restore

When upgrading the software to a new version, you should firstly export the data of the previous version and then import to the new version so that repeated add and settings could be avoided.

NVMS User Manual


12.2.1 Backup System Configuration data

In the interface of Basic Configuration, click ***“Backup System Configuration Data”*** to export the configuration data.

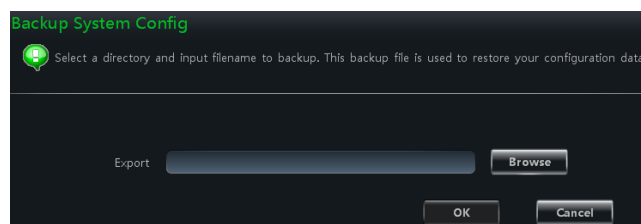

12.2.2 Restore System Configuration Data

 
In the interface of Basic Configuration, click ***“Restore System Configuration Data”*** to import the configuration data.

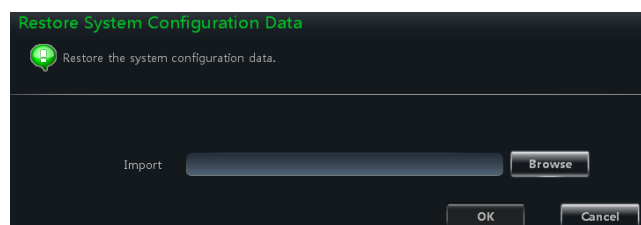

12.3 Manually Trigger the Alarm Output

In the control panel, click ***“Manual Alarm Output”*** under Basic Configuration to enter the interface.

Check “Enable”; select a corresponding device and alarm output; then edit a name for it .

Then an icon  will appear at the right bottom of the software. Clicking this icon will trigger the alarm of selected device.

